

SIM IN A BOX™



ASSEMBLY INSTRUCTIONS

EAGLE PLUS / BIRDIE PACKAGE

VERSION 1.2

 **FORESIGHT
SPORTS**

BEFORE YOU GET STARTED

THANK YOU for purchasing our SIM-IN-A-BOX package.

We're sure this package will provide you with years of enjoyment. Before getting started with assembly, please confirm the following to insure your safety and those using your simulator:

1


Measure and confirm you have enough space to safely install and play. The final setup size of your simulator will be approximately 9 feet tall x 16 feet deep x 13 feet wide. Make sure you have extra space for the assembly process.



BEFORE YOU GET STARTED

2

Make sure you have an assistant during the assembly process.
The frame assembly requires TWO PEOPLE to safely complete.

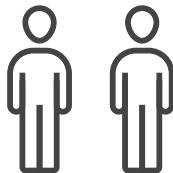

3

Make sure you have all required and recommended tools
(See Page 5) to insure a safe assembly and setup process.



Following these simple guidelines will insure you get the most out of your purchase, the safest way possible.

CONTENTS INSIDE THE BOX

COMPONENTS

- (1) Frame Assembly System
- (1) Front (Hitting) Screen
- (1) Back Screen
- (2) Inner Walls
- (2) Outer Wall Covers
- (1) Lid Panel
- (1) Above Screen Panel
- (1) Blackout Panel
- (1) Rolling Computer Cart
- (2) Rolls of Turf
- (1) Hitting Mat and Tray System
- (1) Simulation Optimized PC
- (1) Wireless Keyboard/Trackpad
- (1) Projector with Power and HDMI Cables
- (1) GCQuad (or GC2) Launch Monitor

TOOLS

- (1) Allen Wrench
- (1) 15 Ft Steel Fish Tape (Roll)
- (1) Zip Ties (Bundle)
- (1) 15' Ratcheting Rope
- (1) Shock Cord

REQUIRED TOOLS & ITEMS

REQUIRED TOOLS (NOT INCLUDED)

- (2) 6-8' Ladders



RECOMMENDED TOOLS (NOT INCLUDED)

- Impact Drill with 3/8" Impact Adapter
- Snips for cutting Zip Ties
- Work Gloves
- Eye Protection Glasses

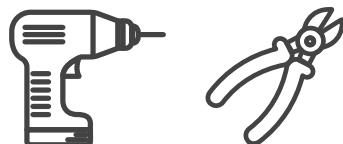



TABLE OF CONTENTS

STEP 1: FRAME ASSEMBLY	Page 6
STEP 2: TURF & SCREEN	Page 20
STEP 3: EXTERIOR PANELS	Page 29
STEP 4: COMPONENT SETUP	Page 37
STEP 5: SOFTWARE SETUP	Page 47

STEP 1: FRAME ASSEMBLY


1A

Locate the (L-Shaped) **Left Base** and the **Center Base** components. Insert the Center Base into the Left Base as shown. Secure with 1 frame assembly screw.

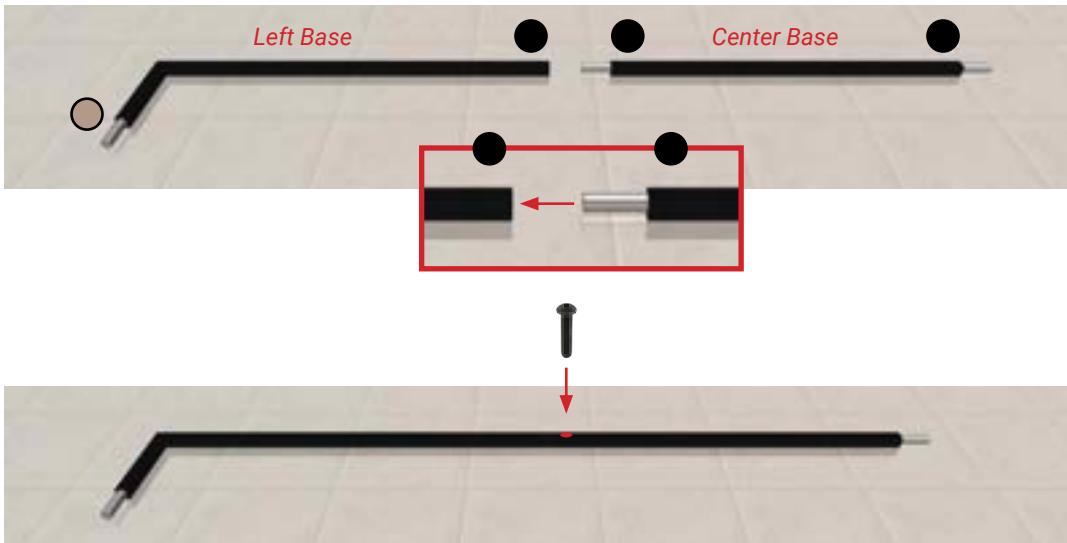

1B




Locate the (L-Shaped) **Right Base** component. Attach to the Base Assembly by repeating Step 1A. Secure with 1 frame assembly screw.

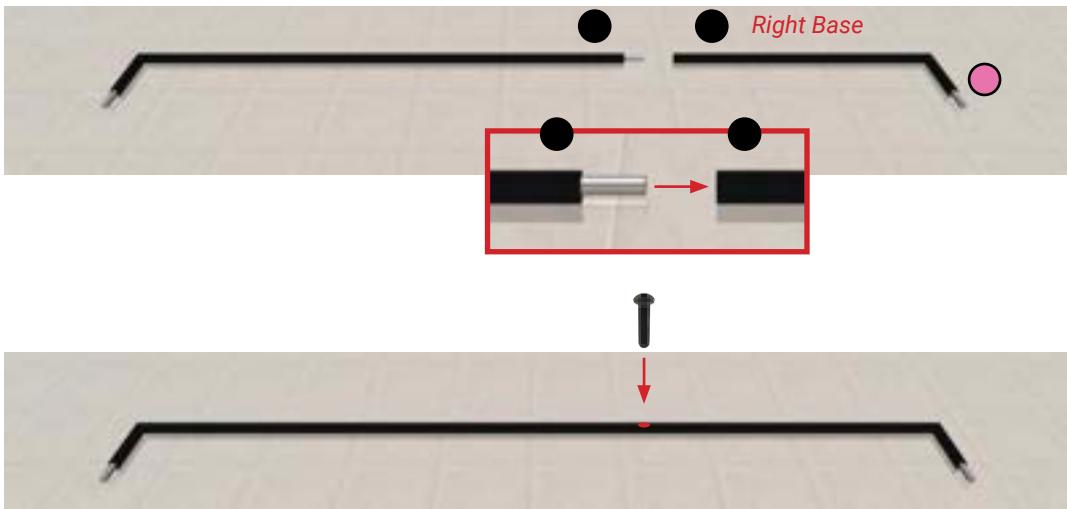

STEP 1: FRAME ASSEMBLY

2


With the Base Assembly completed, locate the **Left Wall Bottom** and **Left Wall Top** components. Connect the components as shown. Secure with 2 frame assembly screws.

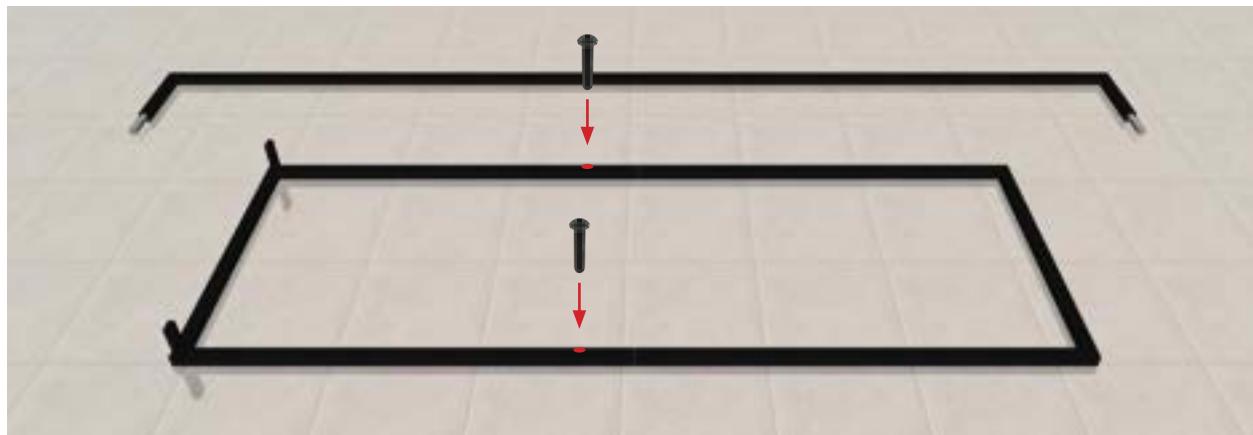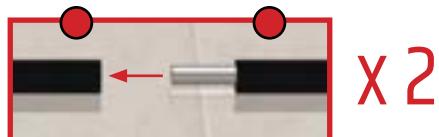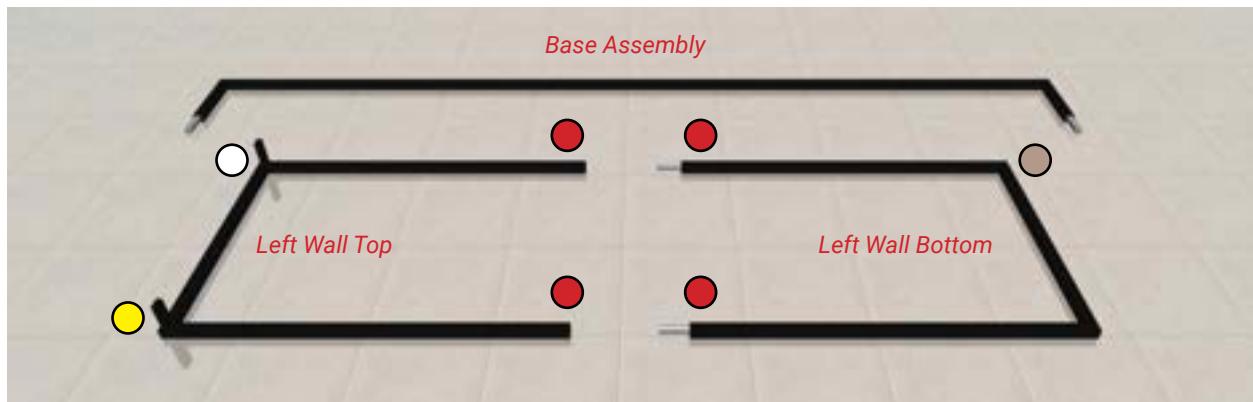

STEP 1: FRAME ASSEMBLY


3A

Orient the Left Wall Assembly vertically as shown with the top assembly trays facing INWARD.

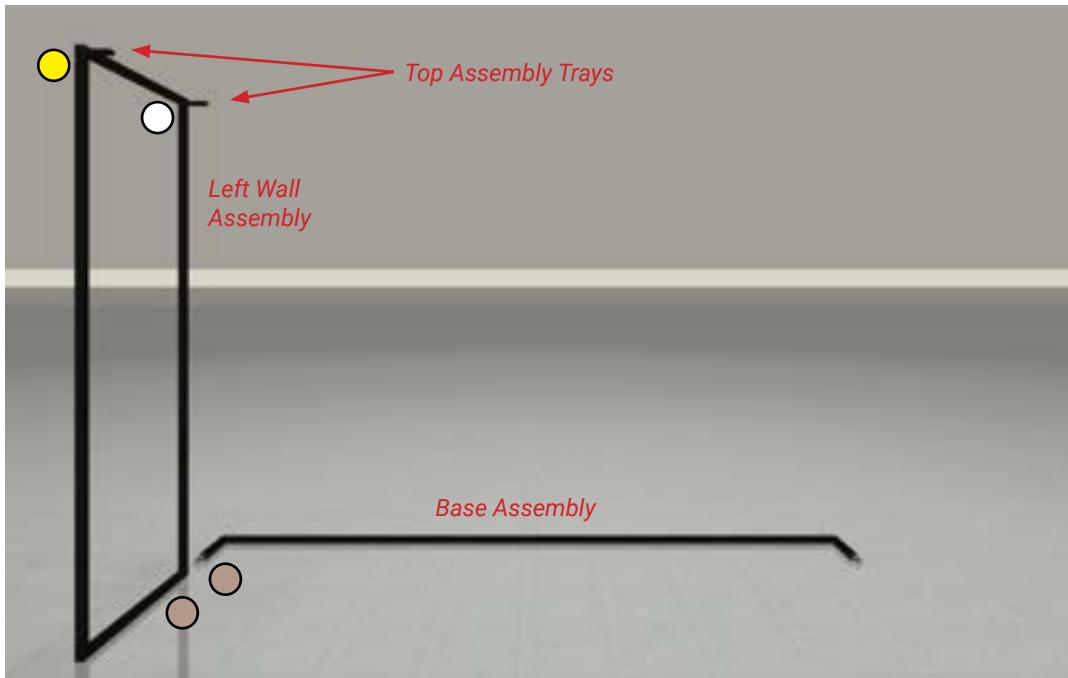

3B

Connect the two assemblies as shown. Secure with 1 frame assembly screw.

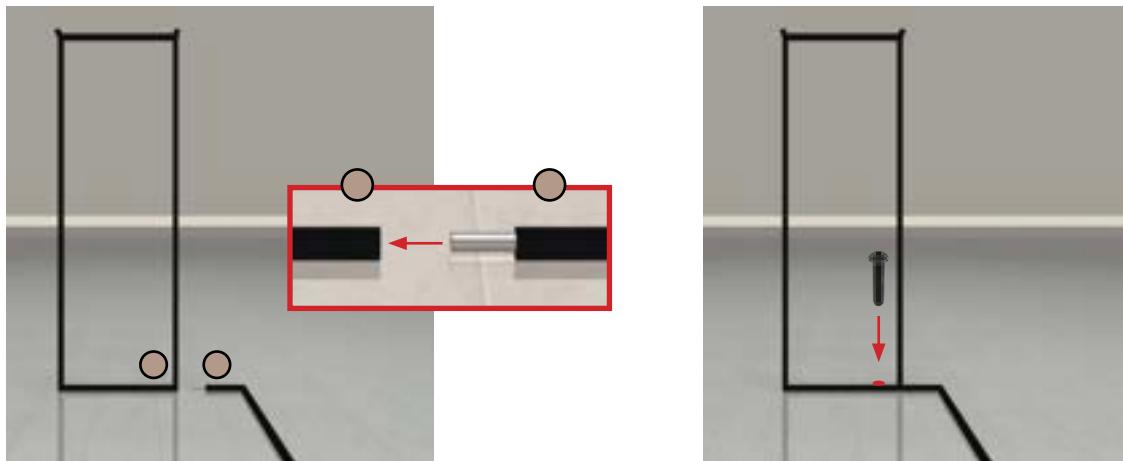





STEP 1: FRAME ASSEMBLY

4



Locate the **Right Wall Bottom** and **Right Wall Top** components.

Repeat Steps 3A + 3B to assemble and connect the Right Wall Assembly

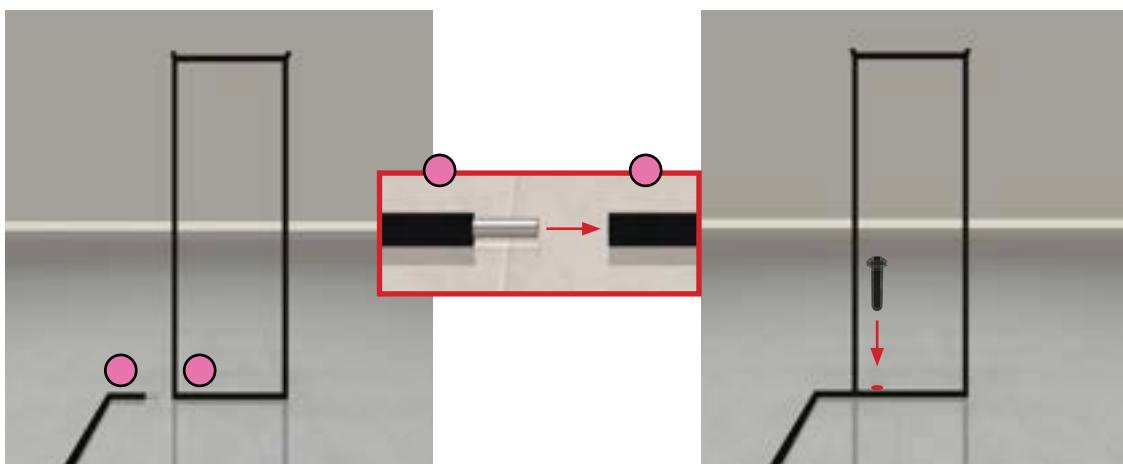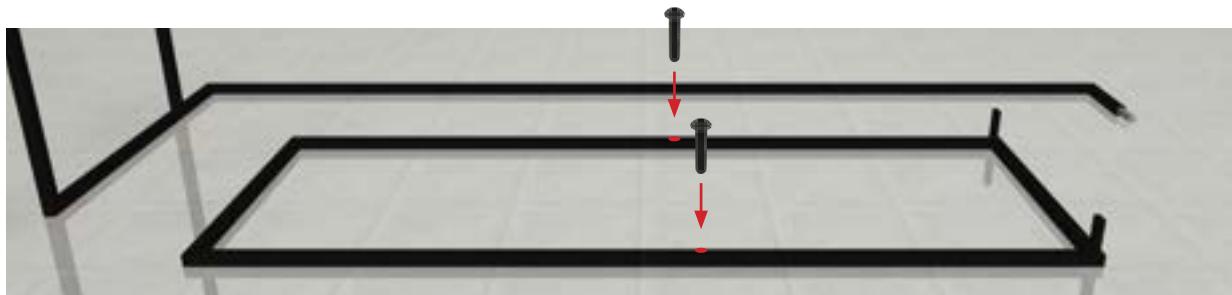
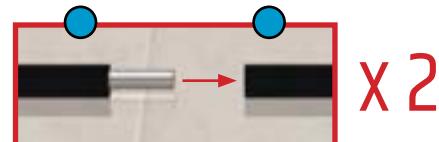
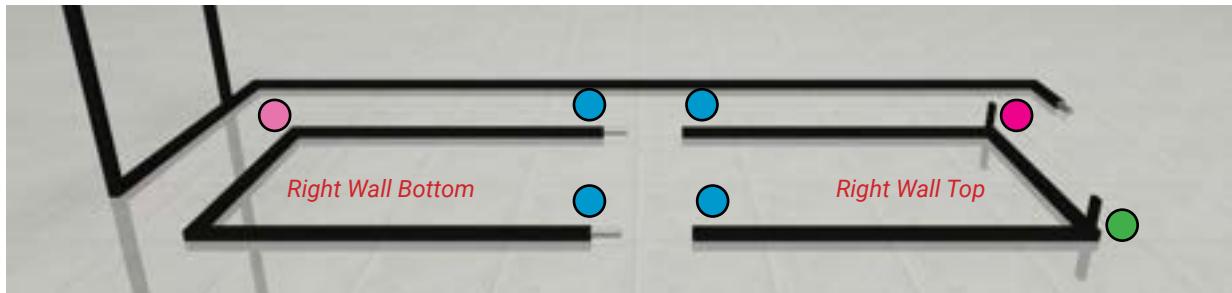


STEP 1: FRAME ASSEMBLY

5




Locate the two (2) **Top BACK Corner Span** components and one (1) **Top BACK Center Span** components. Connect the components as shown. Secure with 2 frame assembly screws.

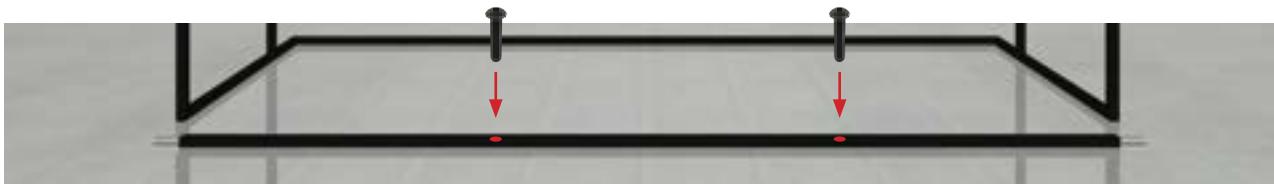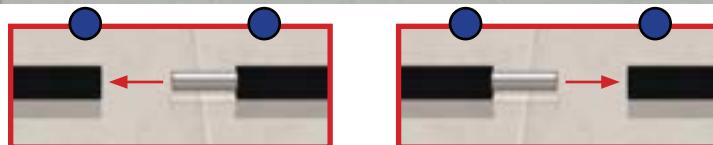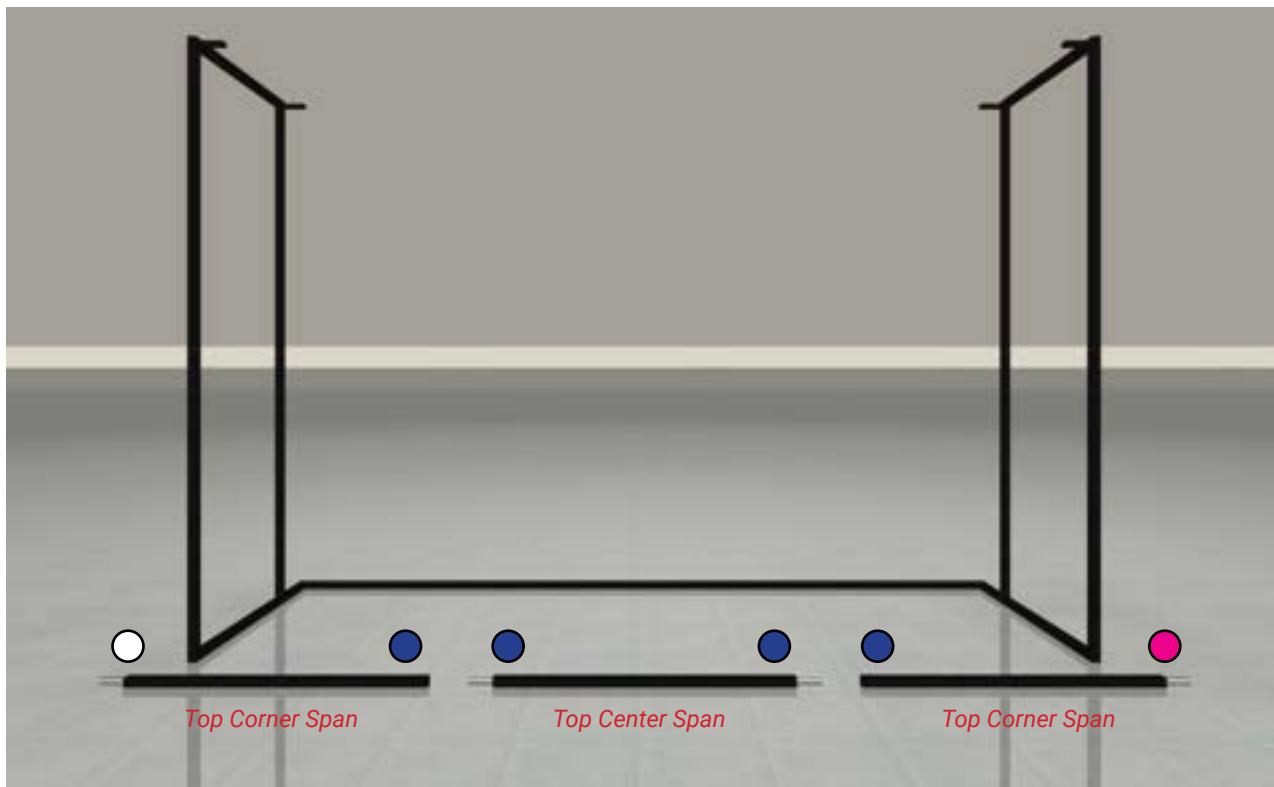

STEP 1: FRAME ASSEMBLY

6A

Using a ladder and with the help of an assitant, carefully lower the Top Span assembly onto the BACK Assembly Trays of the Main assembly.

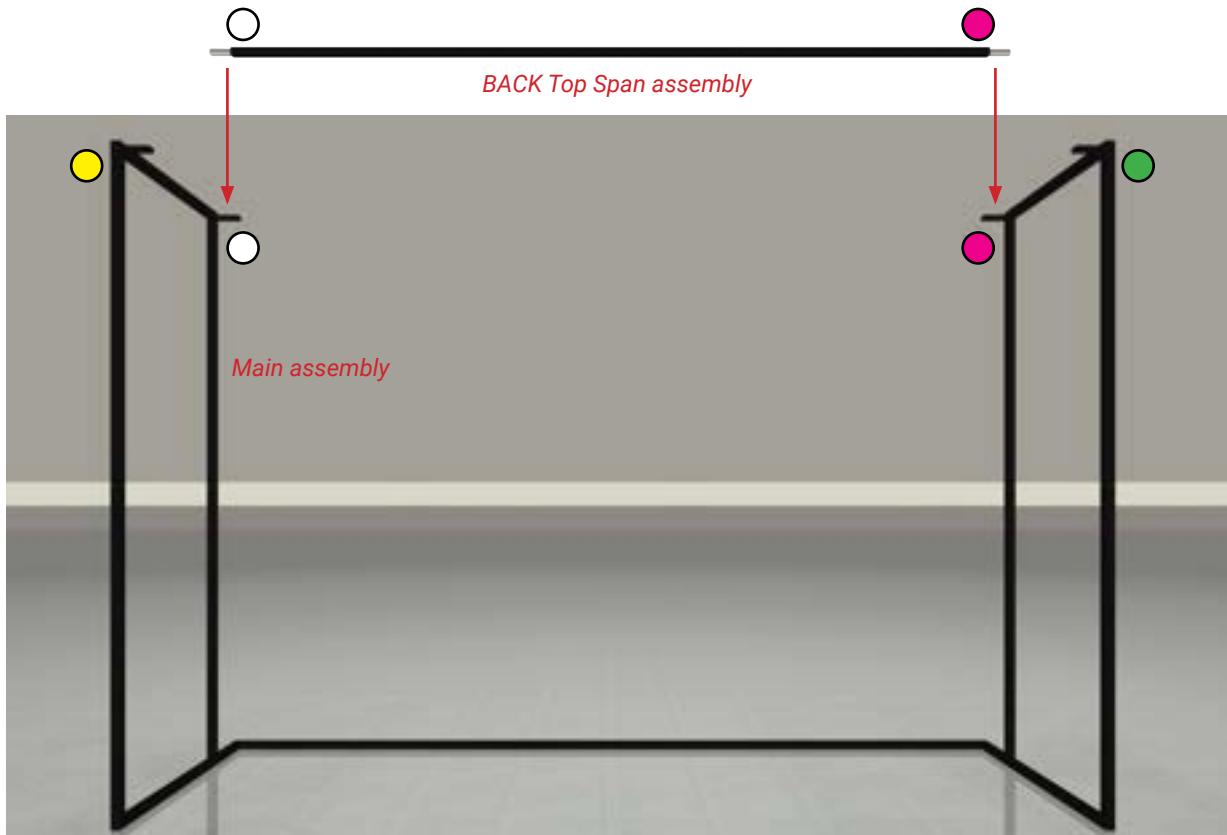

6B


Secure with 2 frame assembly screws.



STEP 1: FRAME ASSEMBLY



7

Locate the two (2) **Top FRONT Corner Span** components and one (1) **Top FRONT Center Span** component. Repeat Steps 5 - 6 to assemble and place the FRONT Top Span to the Main Assembly.

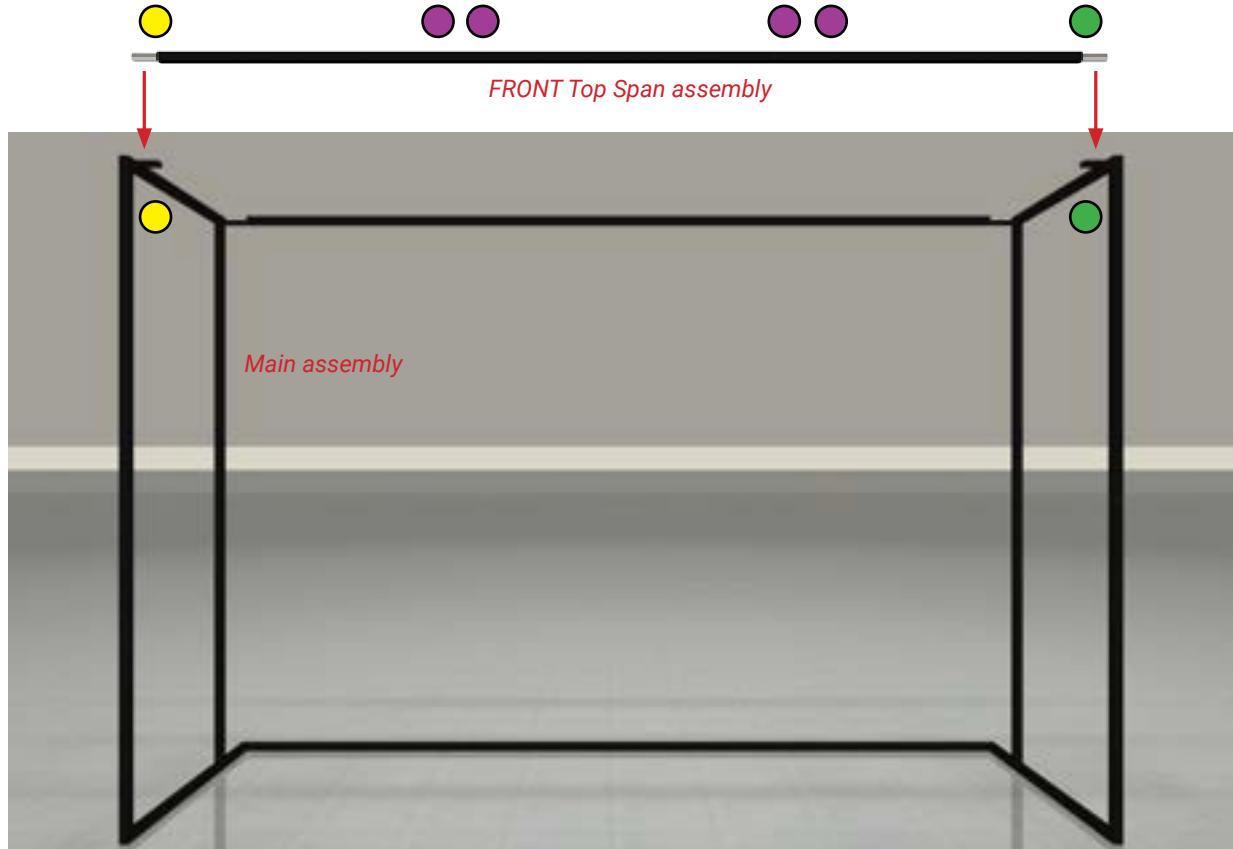

STEP 1: FRAME ASSEMBLY

Great job! The frame assembly is now complete.

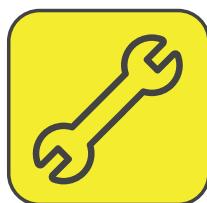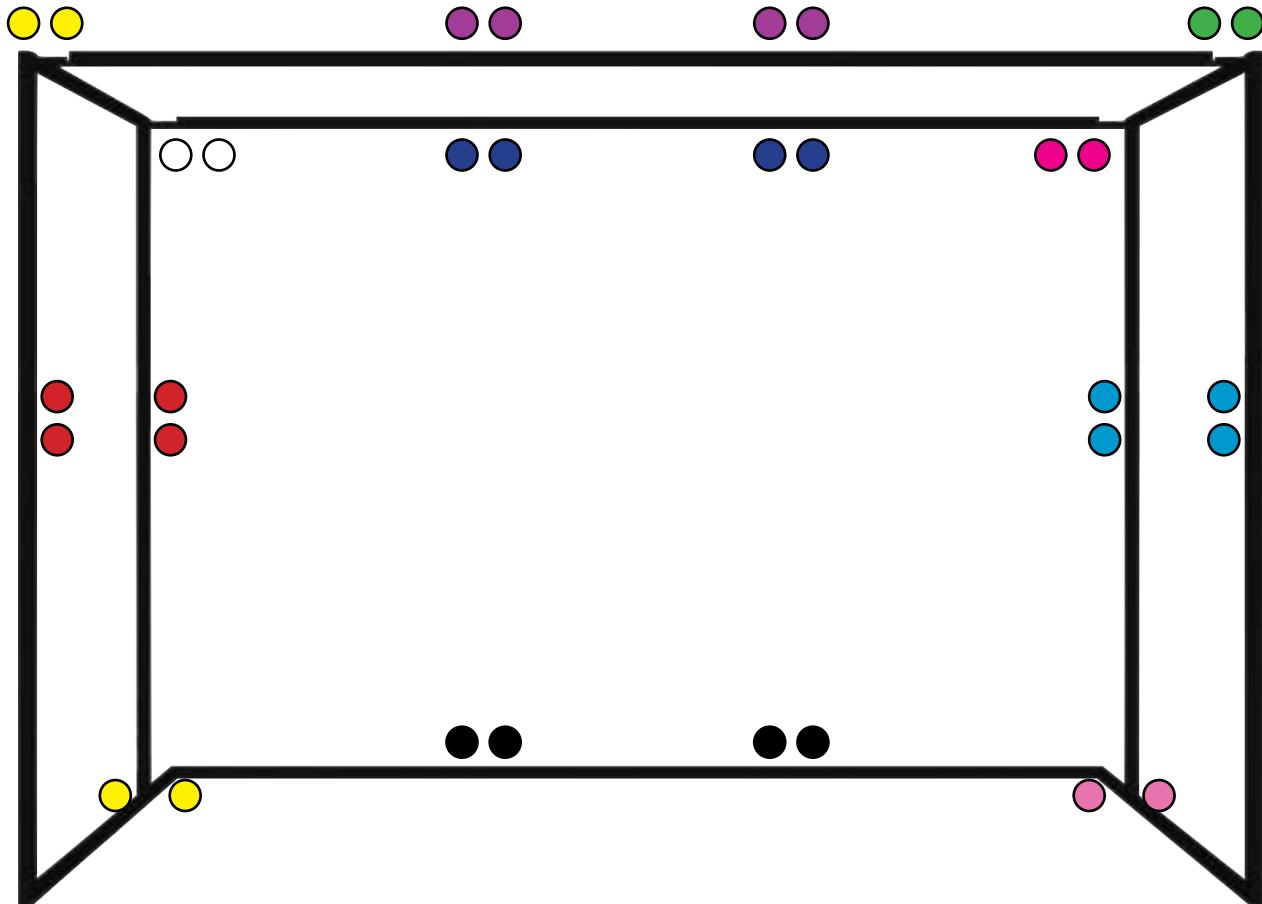

DOUBLE-CHECK!

With the frame now assembled, please re-check that all assembly bolts are tight and the frame is stable and rigid.

STEP 2: TURF & SCREEN

1

Locate the Interior Turf roll and place it inside the assembled frame.

NOTE: Make sure the assembled frame and interior turf are in their final playing position.






STEP 2: TURF & SCREEN

2

Locate the Mesh Screen Backing and the Top Attachment Cord

Attach the Top Attachment Cord to the frame by placing the hook into the steel eye hook located on the inside top of the rear LEFT support as shown.

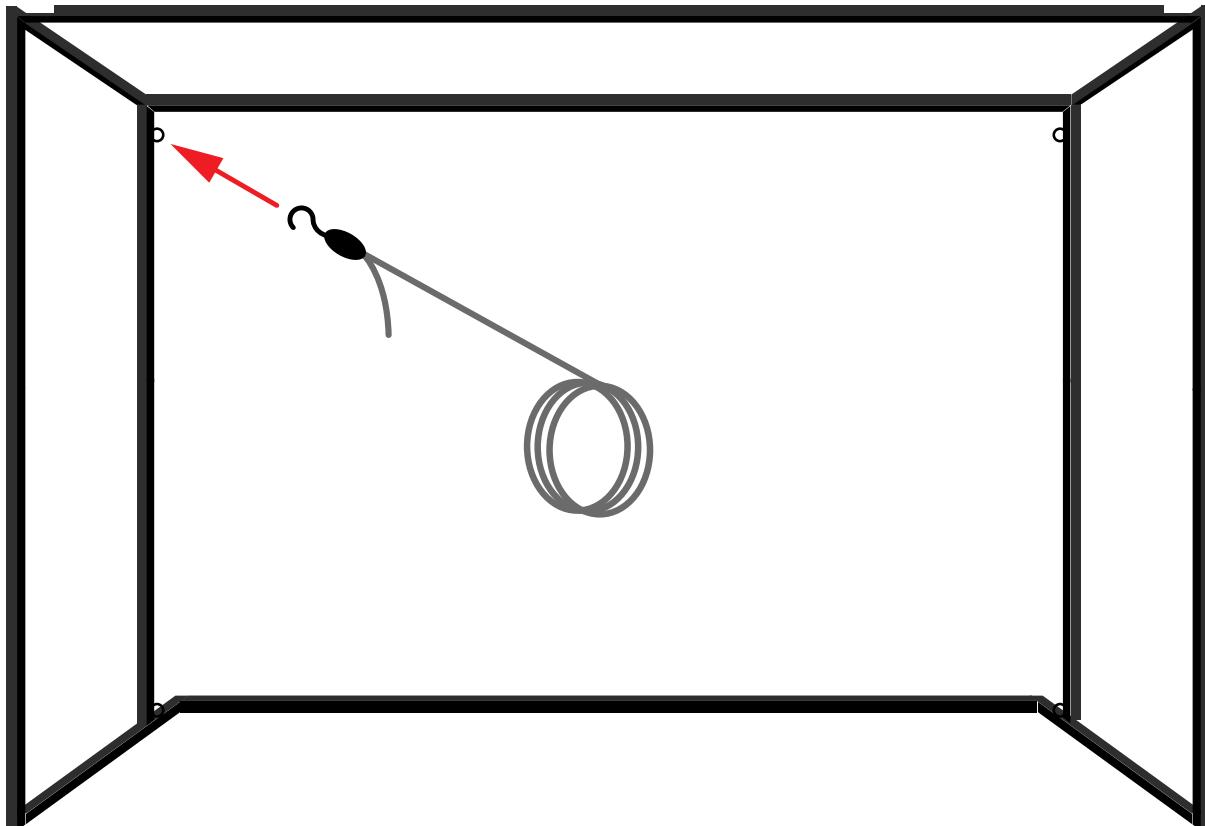




STEP 2: TURF & SCREEN


3A

Unfold the Mesh Screen Backing and thread the Top Attachment Cord through the top row of grommets holes **STARTING WITH THE SECOND HOLE** as shown. Thread the Top Attachment Cord through all grommet holes BUT NOT the final grommet hole.

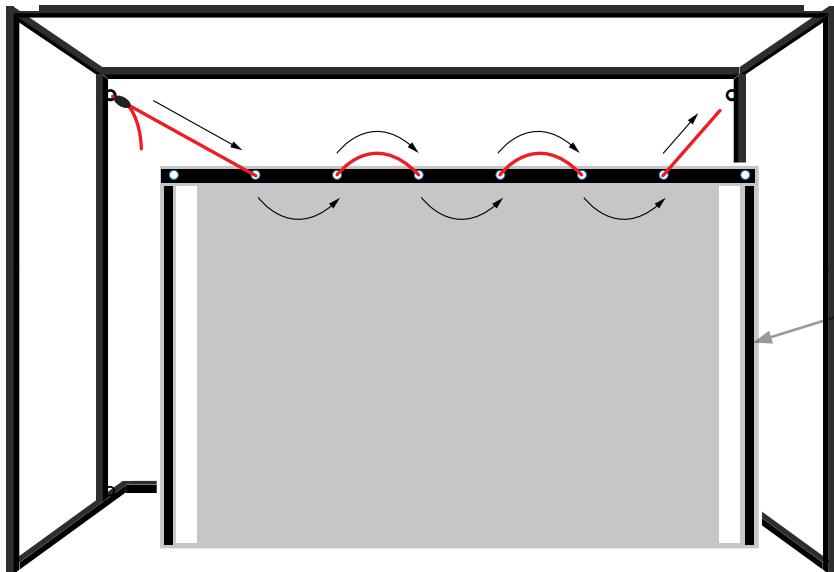

3B

With the Top Attachment Cord threaded, locate the separate attachment hook and tie it onto the end. Make sure the knot is properly tight and secure.

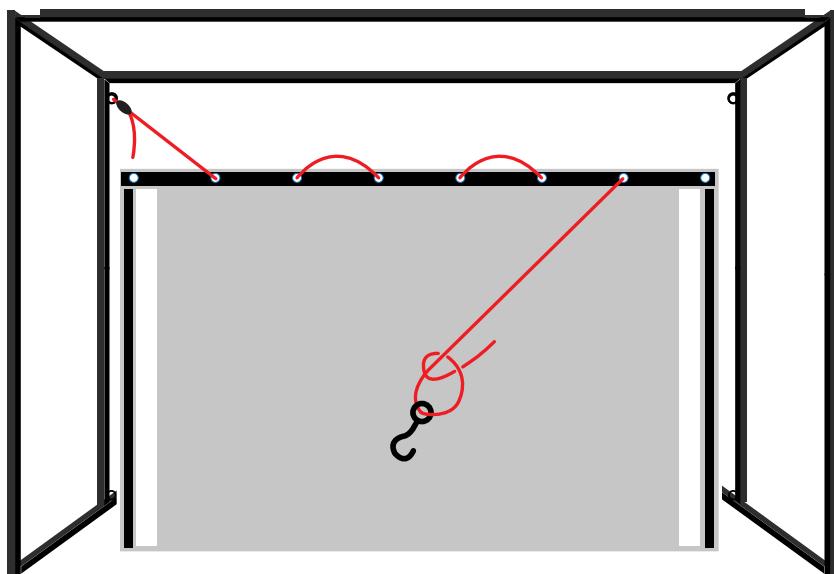


REQUIRED FOR THIS STEP



STEP 2: TURF & SCREEN


4A

Attach the Top Attachment Cord to the frame by placing the hook into the steel eye hook located on the inside top of the rear RIGHT support as shown.

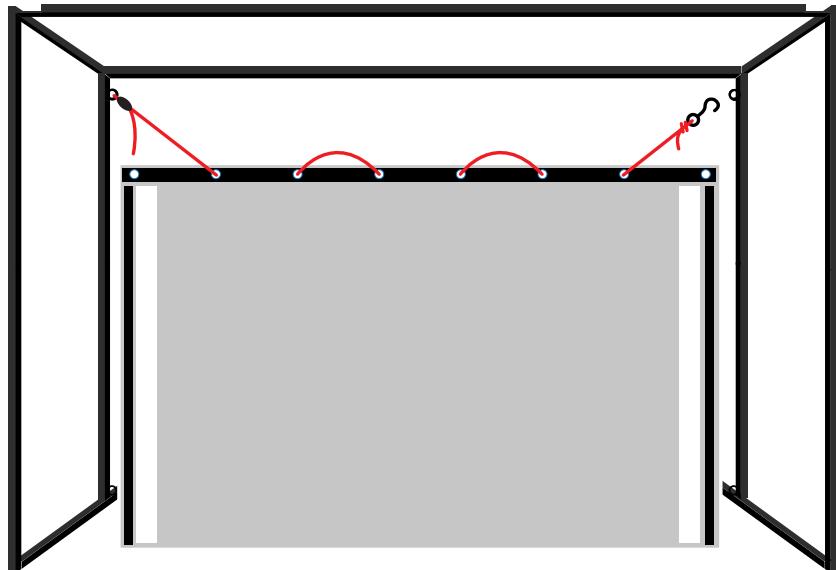

4B

Tighten the Top Attachment Cord by pulling on the loose end located on the left side. The included pulley system will prevent the cord from loosening once pulled.

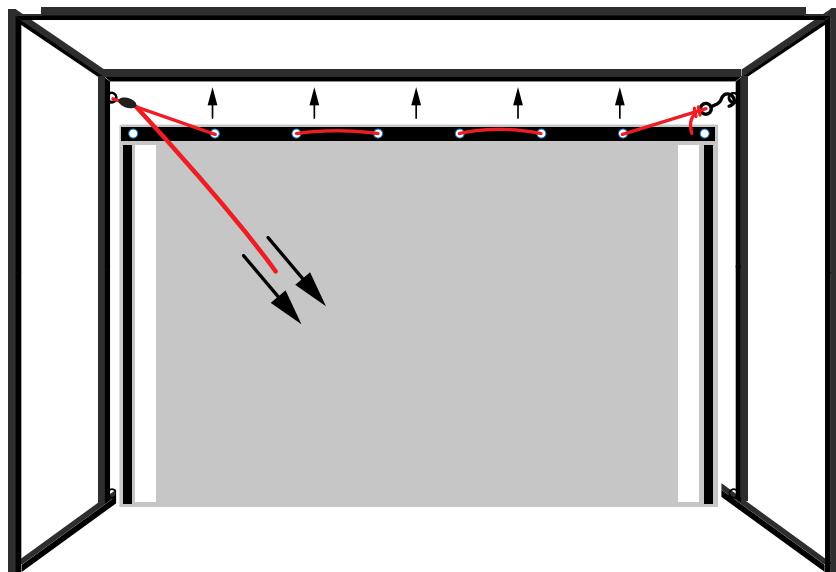


REQUIRED FOR THIS STEP



STEP 2: TURF & SCREEN


5A

With the Top Attachment Cord pulled tight and the Mesh Screen Backing spread out evenly, locate the two (2) provided Zip Ties and secure the OUTER grommet holes of the Mesh Screen Backing to the steel eye hooks holding the Top Attachment Cord on each side of the frame.

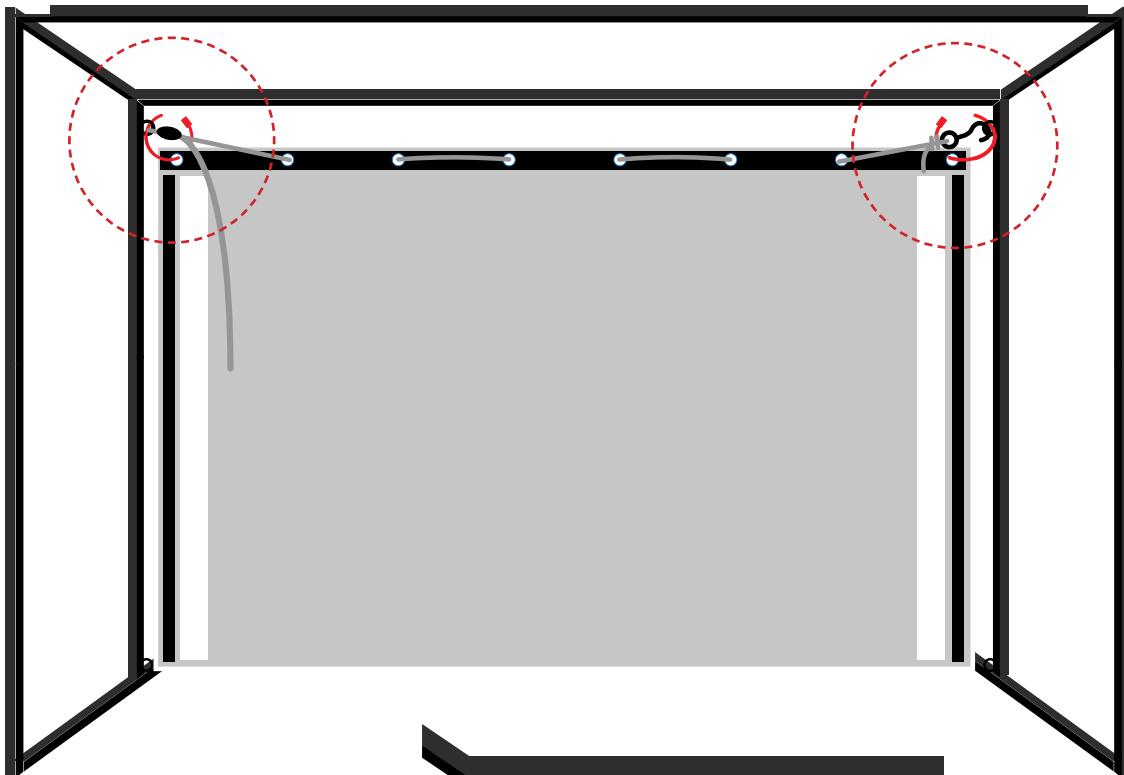

5B

Once attached, make sure the two Zip Ties are secured tightly.

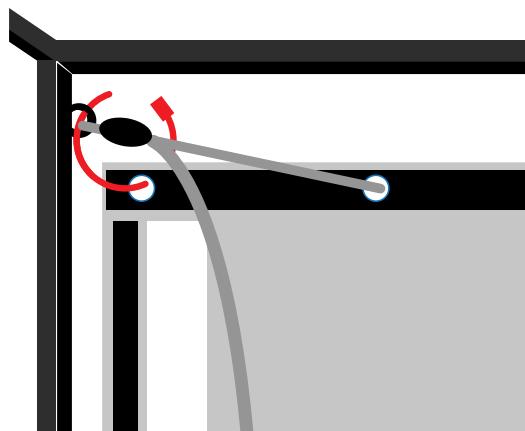


REQUIRED FOR THIS STEP



STEP 2: TURF & SCREEN


6A

Locate the long Zip Tie provided and place it around both the center of the Rear Top Frame Support and the Top Attachment Cord as illustrated below.

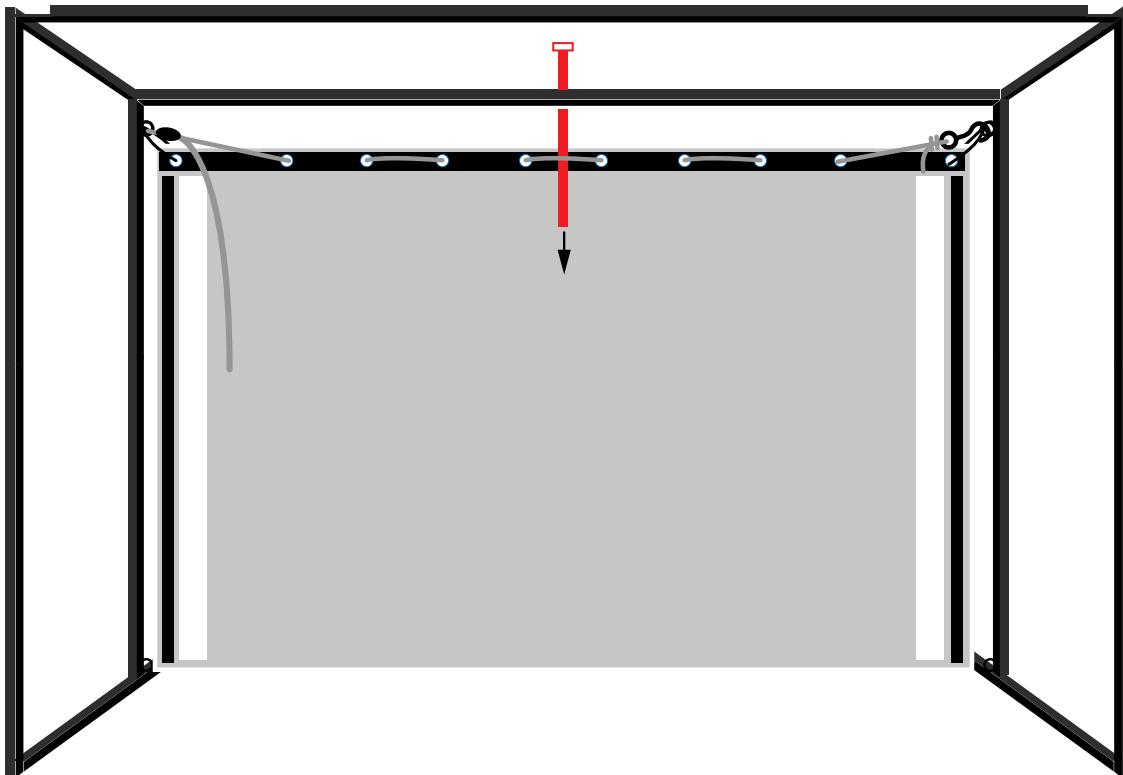

6B

Use to Zip Tie to raise the Mesh Screen Backing until it is LEVEL with both sides, and then secure as shown.

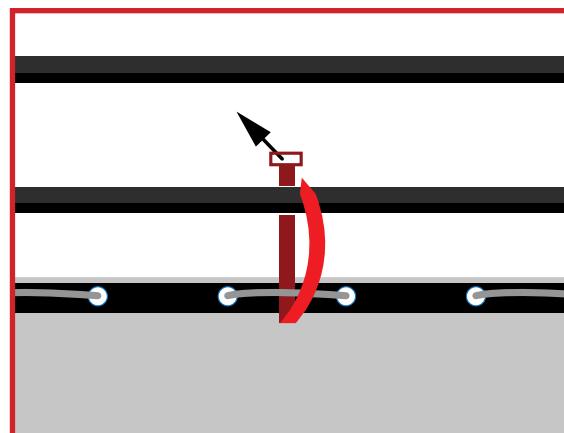


STEP 2: TURF & SCREEN

REQUIRED FOR THIS STEP



7 Secure the Mesh Screen Backing to the Frame Assembly by attaching the vertical velcro edges on each side of the Mesh Screen Backing to the vertical velcro edges on the back of the both rear frame support columns.

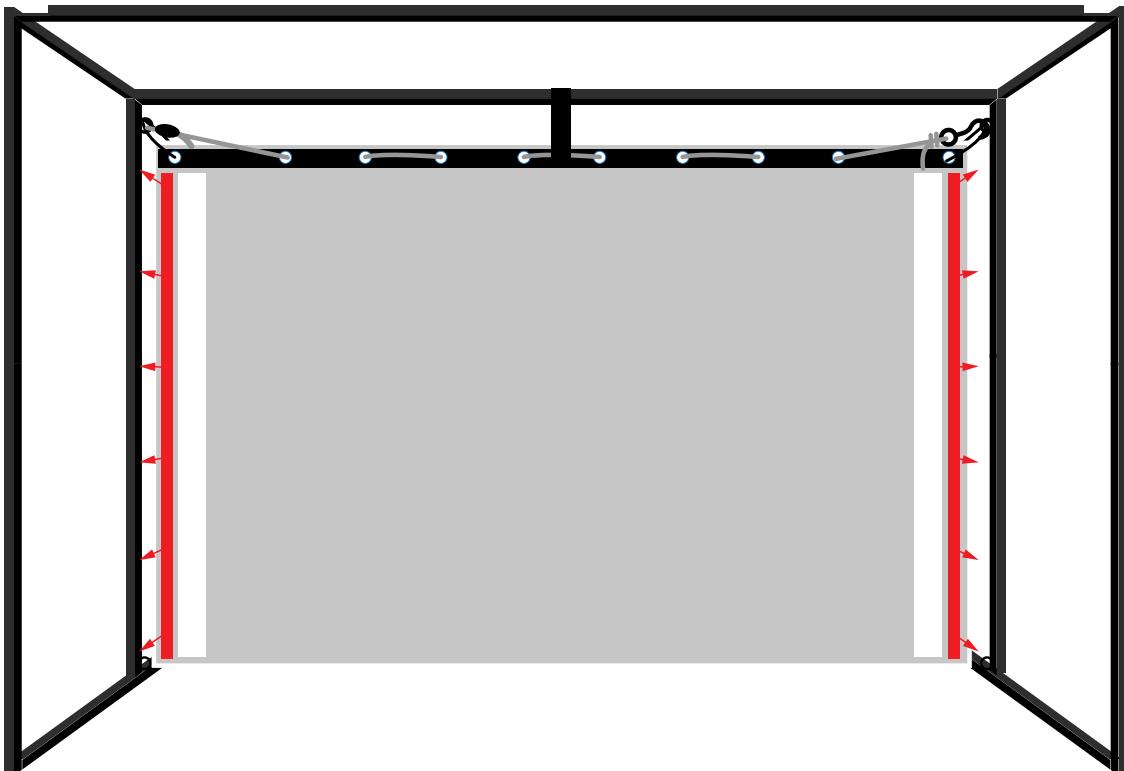




STEP 2: TURF & SCREEN


8A

Using the provided wire feeder, feed the Bottom Attachment Cord through the bottom edge sleeve of the Mesh Screen Backing as illustrated.

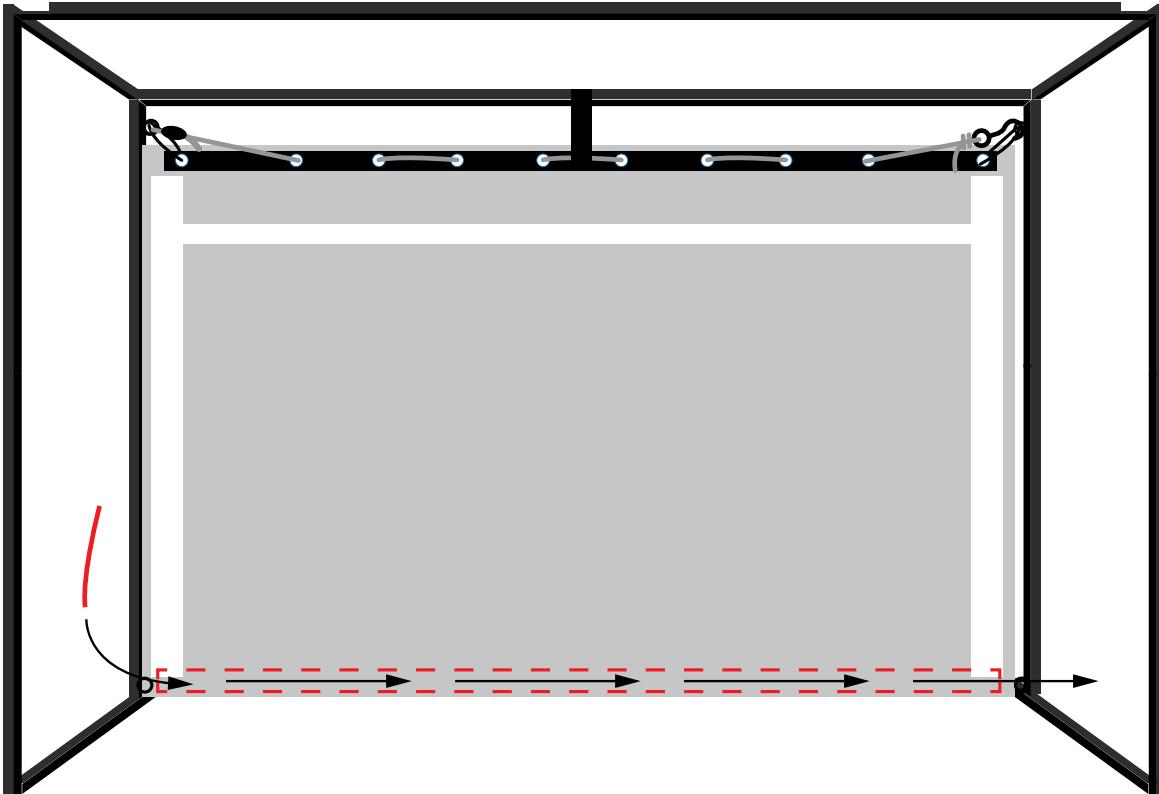

8B

Tie the Bottom Attachment Cord securely to the lower LEFT steel eye hook, then pull the cord on the RIGHT until there is a small amount of tension on the cord before securing to the lower RIGHT steel eye hook.

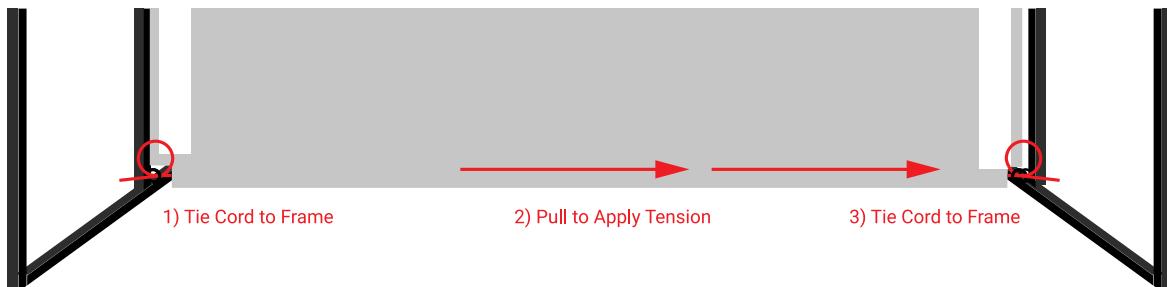




STEP 2: TURF & SCREEN


9

It is now time to attach the Hitting Screen to the Mesh Screen Backing. To begin, first unfold the Hitting Screen and align the upper right hand corner to the velcro strips on the upper right hand corner of the Mesh Screen Backing and press firmly. Continue by attaching the velcro outward along the horizontal and vertical strips, being careful to maintain a straight alignment without wrinkles.

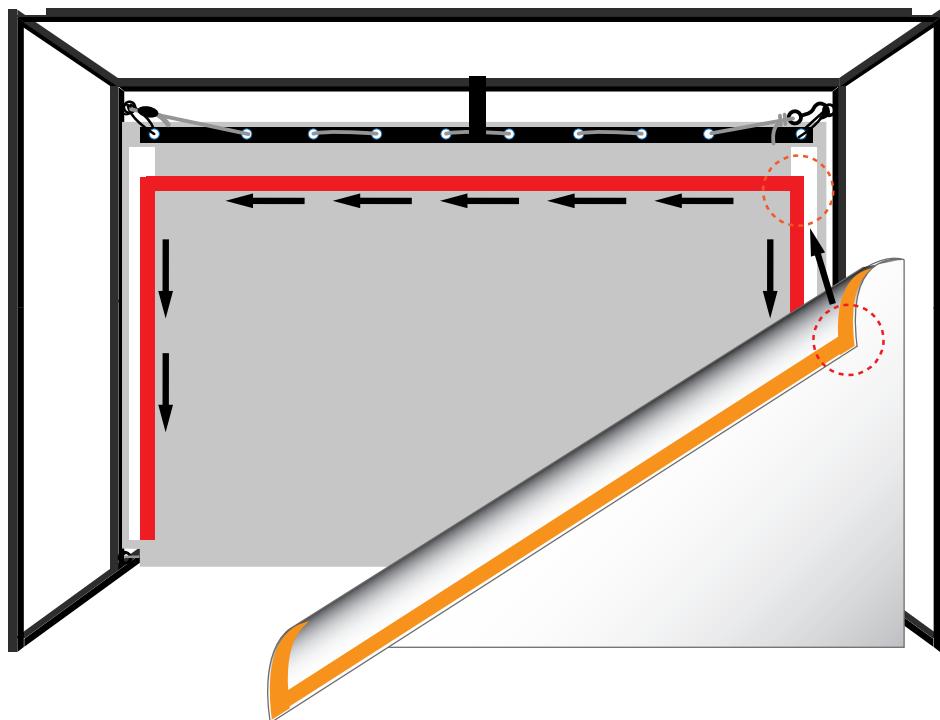

CAUTION: When disassembling, use care not to tear the back screen.

When finished, the hitting screen should be level and flat, without noticeable wrinkles. Should any wrinkles be present, adjust the velcro attachment around the problem area.

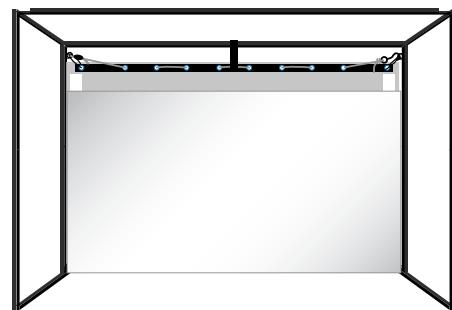


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS


1A

Locate the (1) Outer Lid Panel and attach to the outside top of the Frame Assembly using the velcro strips on each end. Align flush with the SIDES and BACK of the Frame Assembly.

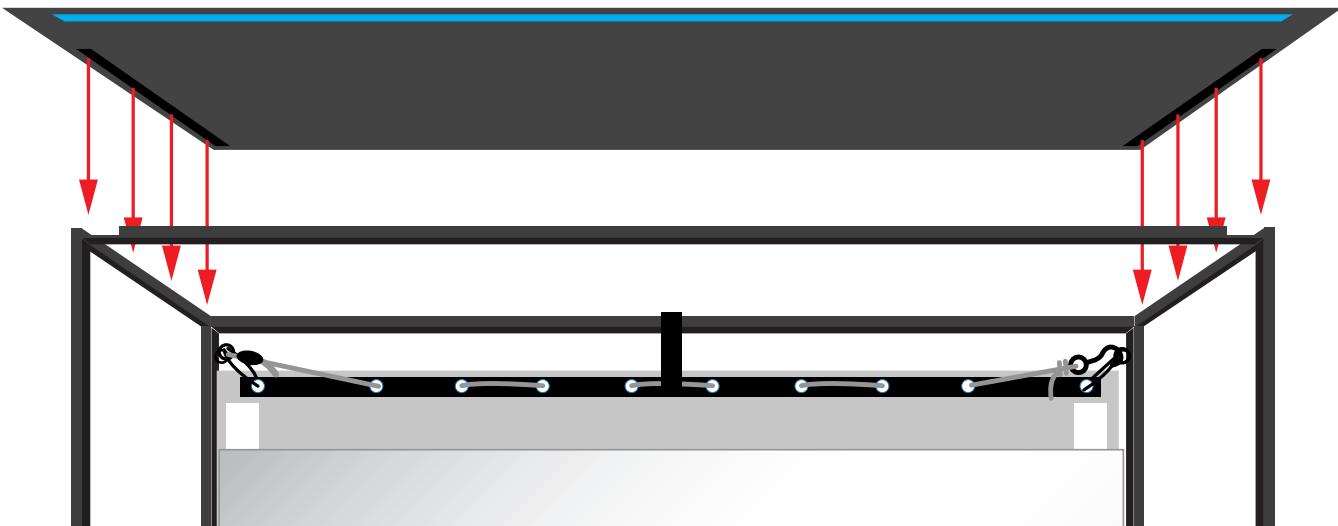

1B

Once the Lid Panel is properly aligned and secure, remove the protective strip covering the velcro running along the (under side) front edge.

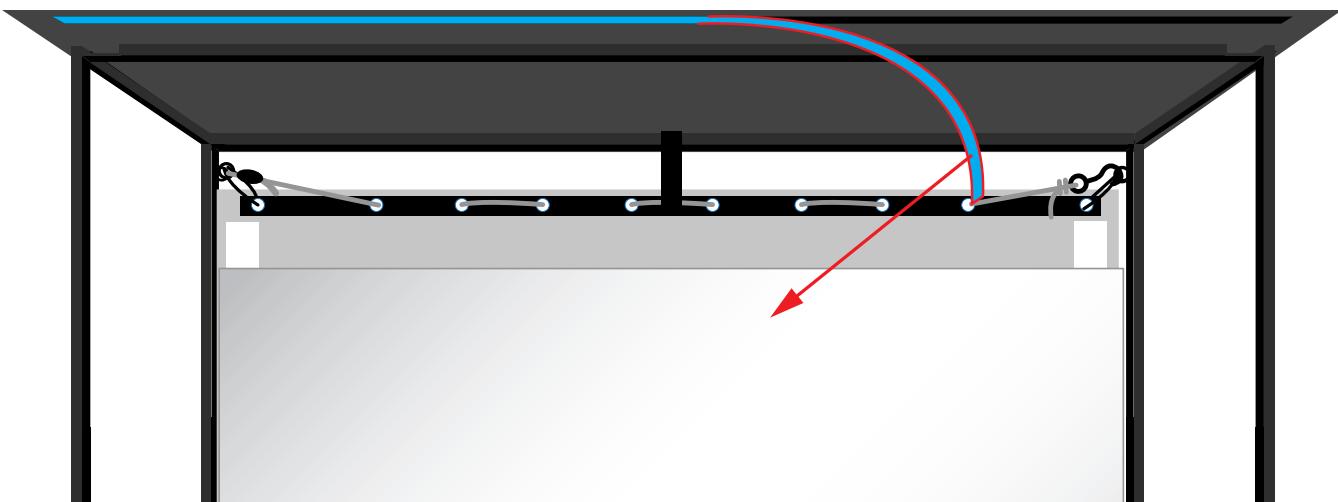


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS

1C

Pull the front edge of the Outer Lid Panel over and around the front bar of the Frame Assembly with even pressure and secure it to the underside surface using the velcro strip.

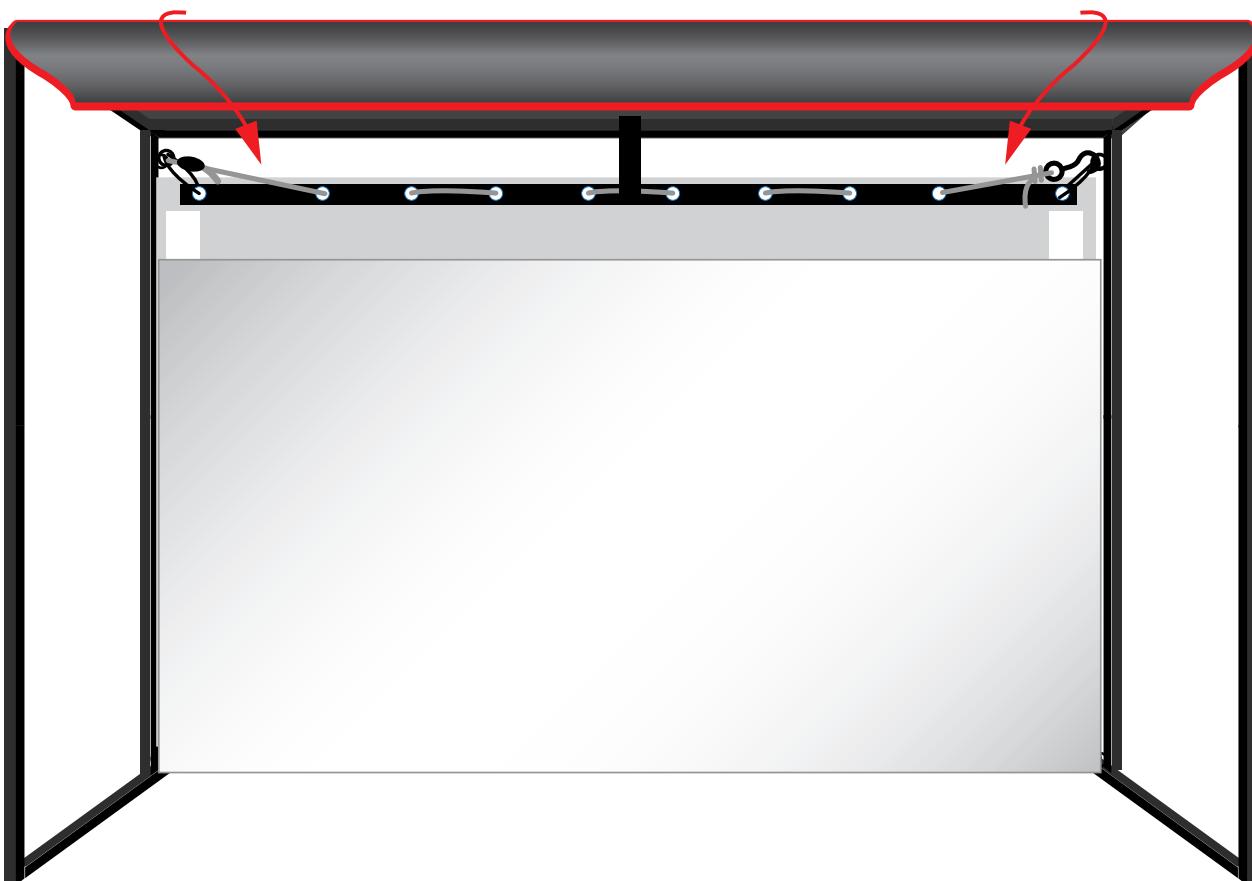


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS


2A

Locate the (2) Inner Side Panels. Attach the LEFT Inner Side Panel to the inside top left of "the Frame Assembly using the velcro strip. Align the lid panel flush with the BACK edge of the Frame Assembly. Approximately six (6) inches of the Left Side Panel should stick out beyond the front of the frame.

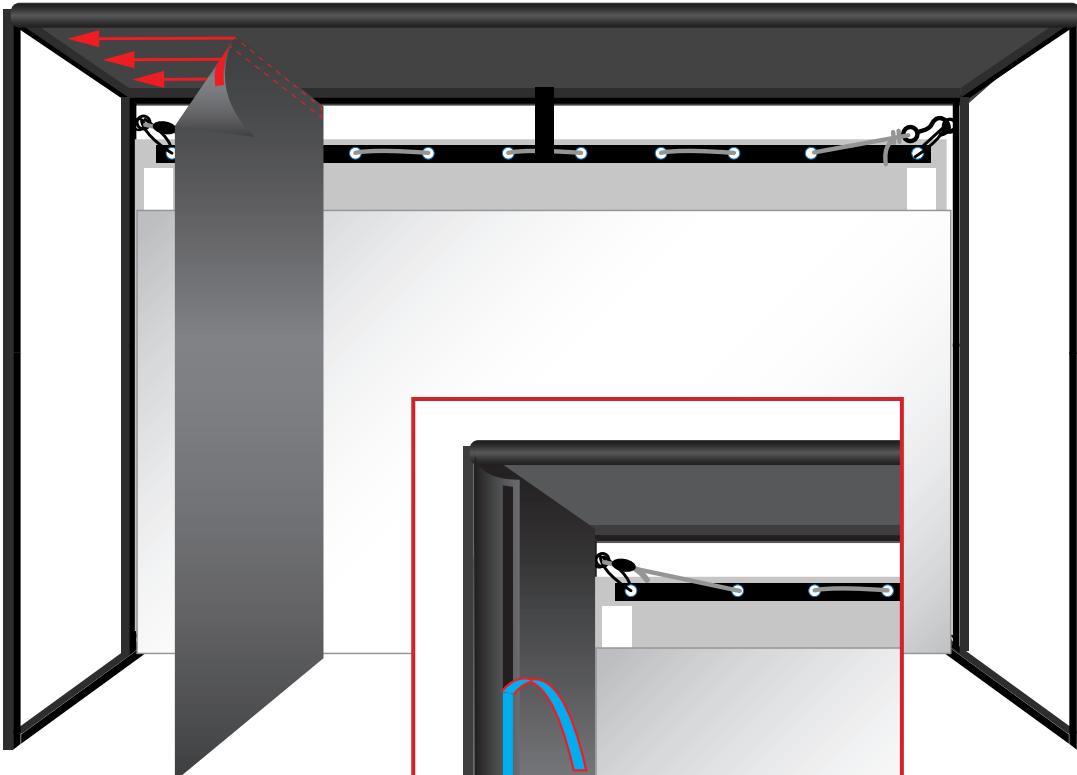

2B

Once the Side Panel is properly aligned and secure, remove the protective strip covering the velcro running along the (outside) front edge.

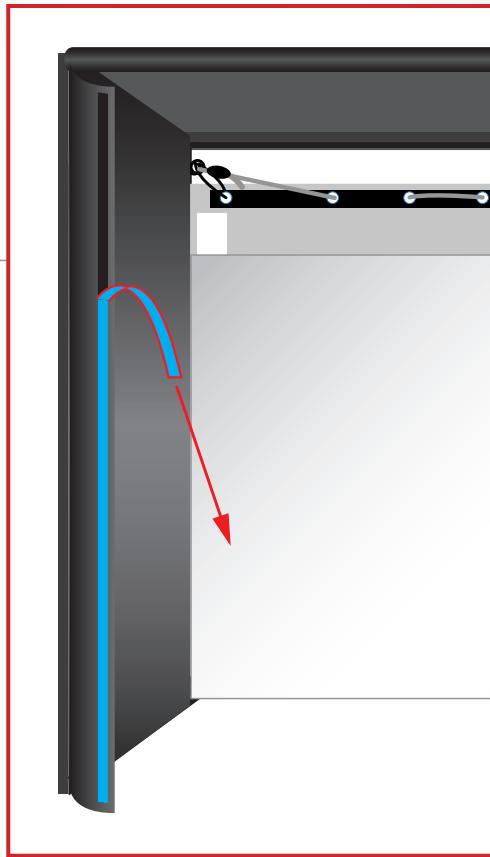


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS

2C

Pull the front edge of the Inner Side Panel over and around the side bar of the Frame Assembly with even pressure and secure it to the outside surface using the velcro strip.

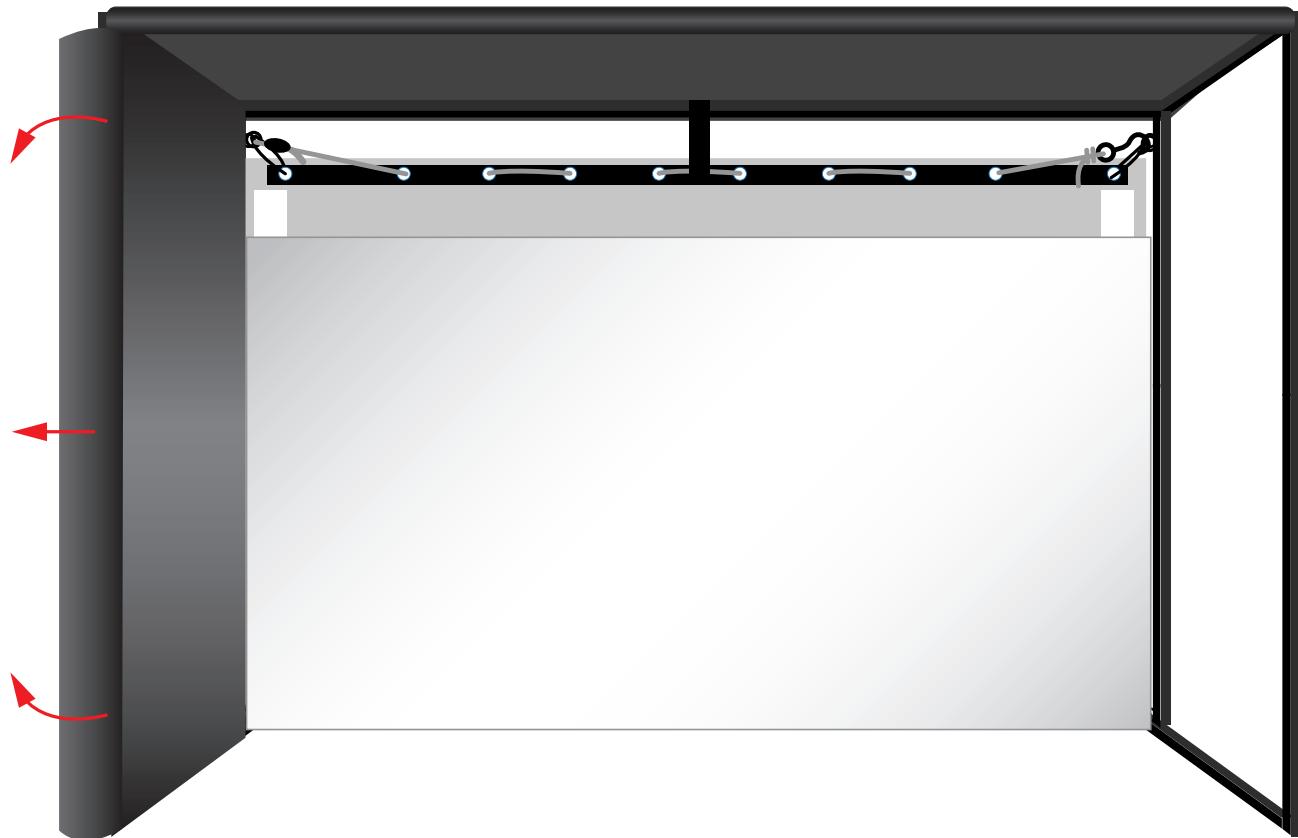

2D

REPEAT Steps 2A - 2C with the RIGHT Inner Side Panel.


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS


3A

Locate the (1) Above Screen Panel and attach to the top edge of the Hitting Screen using the velcro strip, aligning flush with the top edge of the hitting screen as illustrated below.

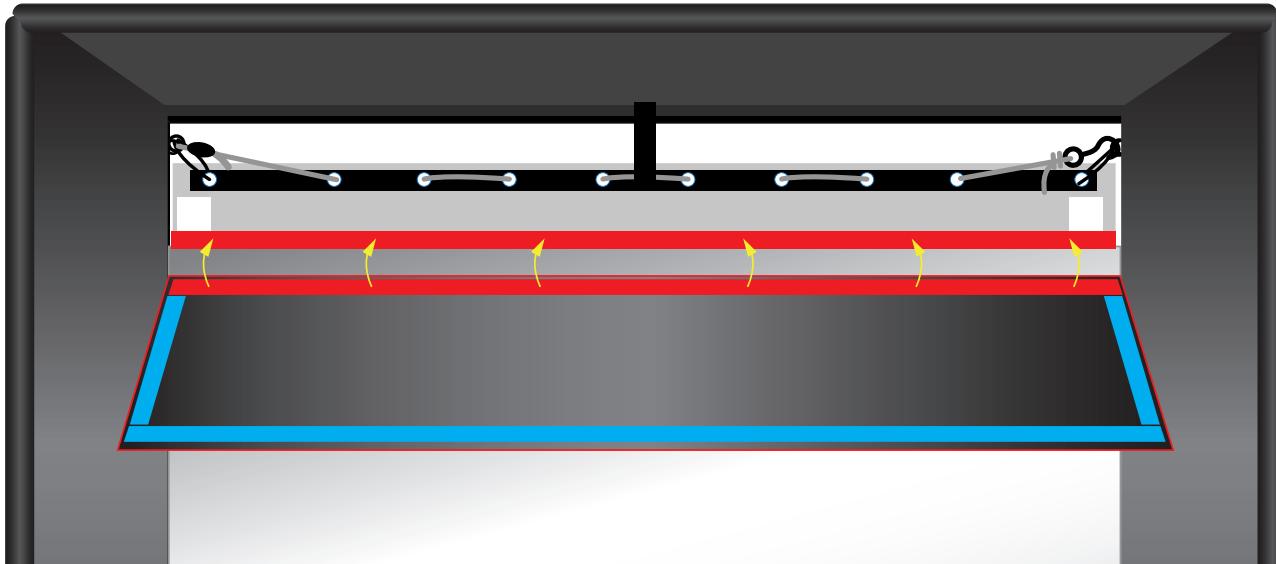

3B

Once the Above Screen Panel is properly aligned and secured to the top edge of the Hitting Screen, remove the protective strips covering the velcro running along the front and side edges.

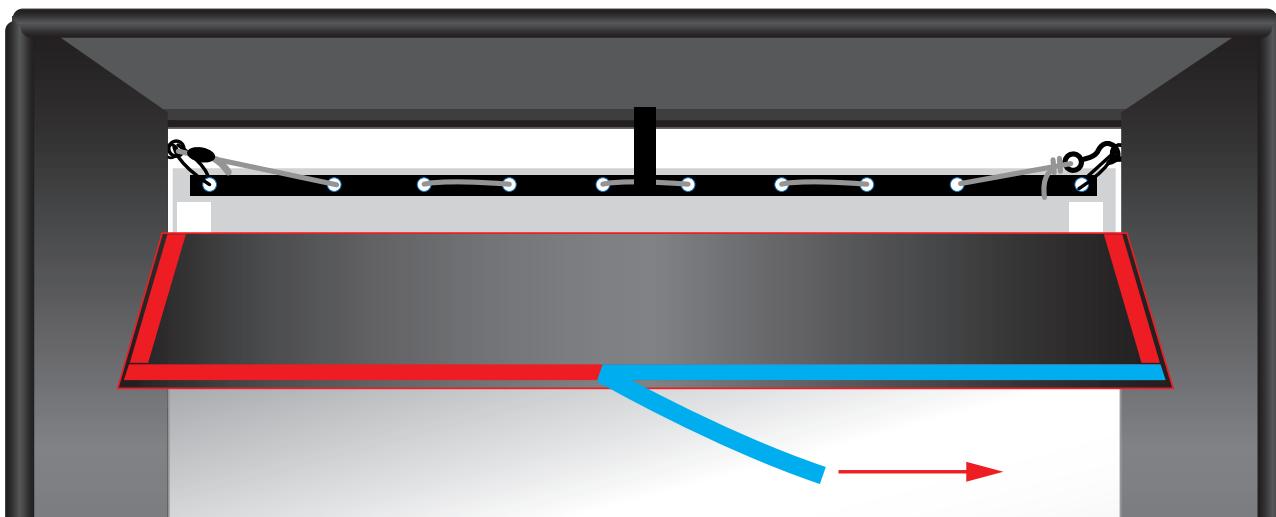


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS

3C

Starting in the center, attach the Above Screen Panel to the Lid Panel using the velcro strip, being careful to keep the edge straight and smooth as you move to each corner. Secure the side strips of velcro to the Inner Side panels to insure a tight, smooth fit.

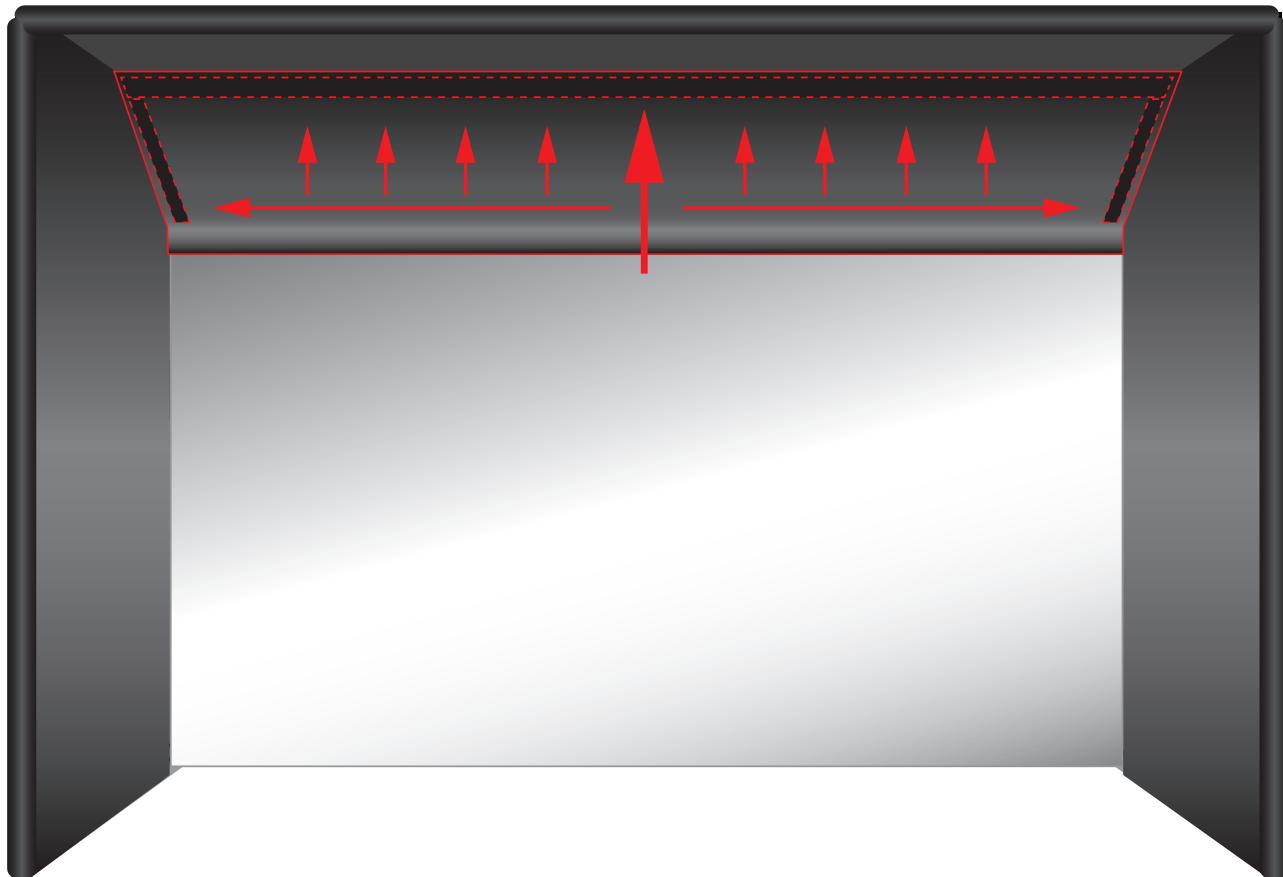


REQUIRED FOR THIS STEP



STEP 3: EXTERIOR PANELS

4A

Locate the (2) Outer Side Panels. Starting at the top, attach the LEFT Outer Side Panel to the outside top left of the Frame Assembly using the velcro strip. Align the panel flush with all edges before attaching the panel down the front and back edges, being careful to keep the edges straight and smooth as you move downward.

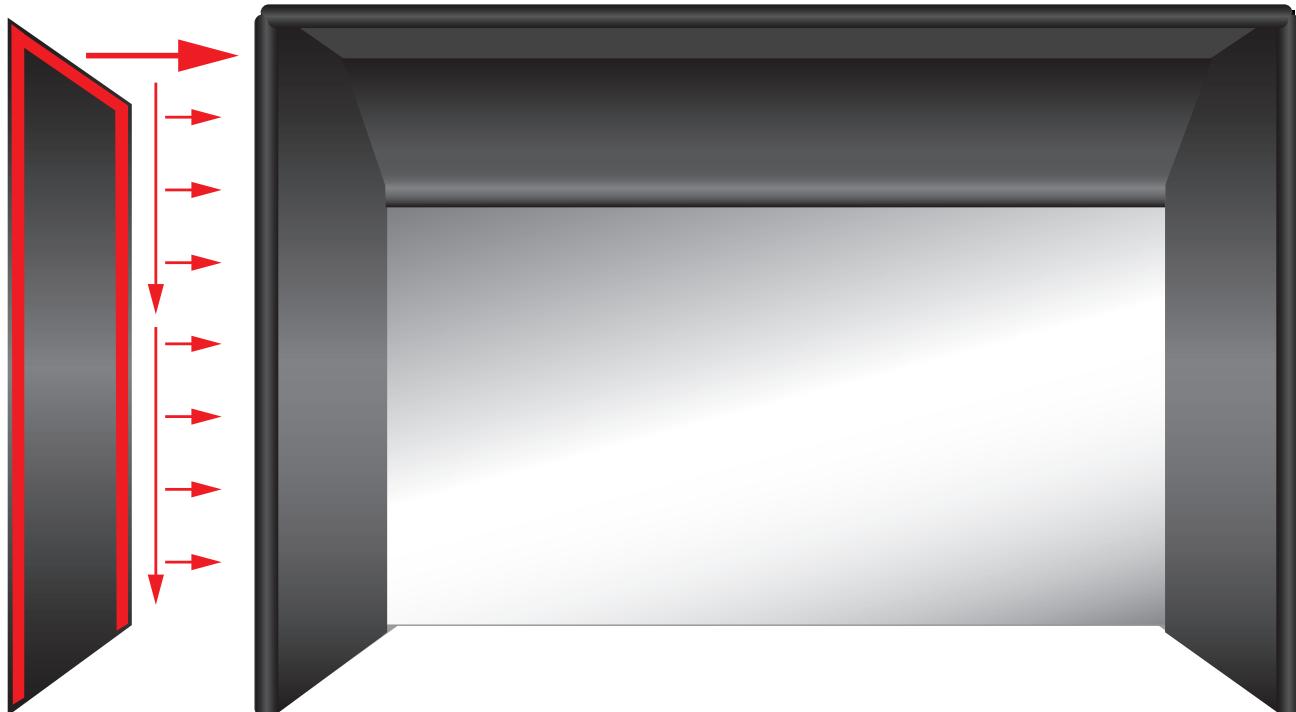

4B

REPEAT Step 4A with the RIGHT Outer Side Panel.


STEP 3: EXTERIOR PANELS

REQUIRED FOR THIS STEP



5

Locate the (1) Blackout Panel and move it to the back side of the frame assembly. Starting at one end, attach the Blackout Panel to the outside top corner of the Frame Assembly using the velcro strip. Align the panel flush with the top edge before attaching the panel down each side edge, being careful to keep the edges straight and smooth as you move downward.

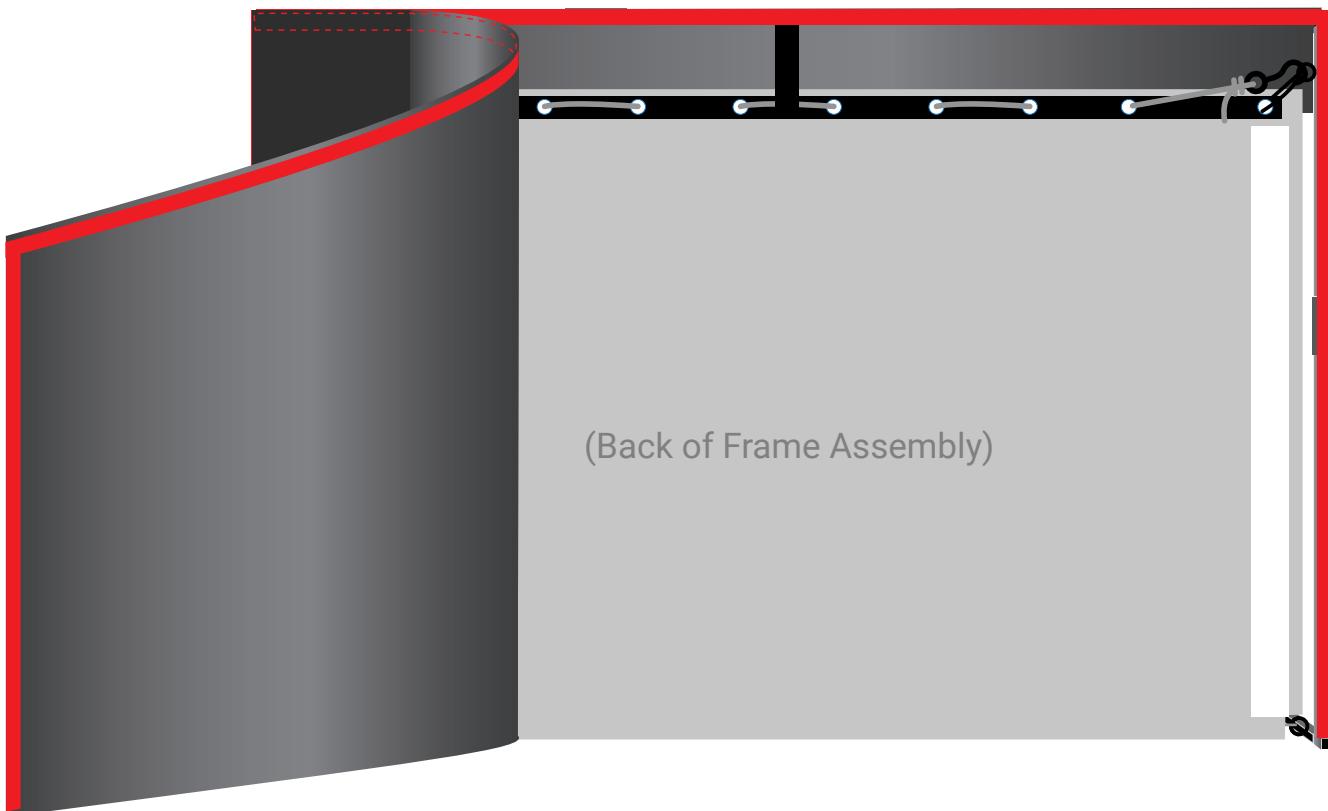


Congratulations!
The Frame Assembly is now complete!

STEP 4: COMPONENT SETUP

1


Locate the second (outer) Turf Roll and unroll & position it in front of the

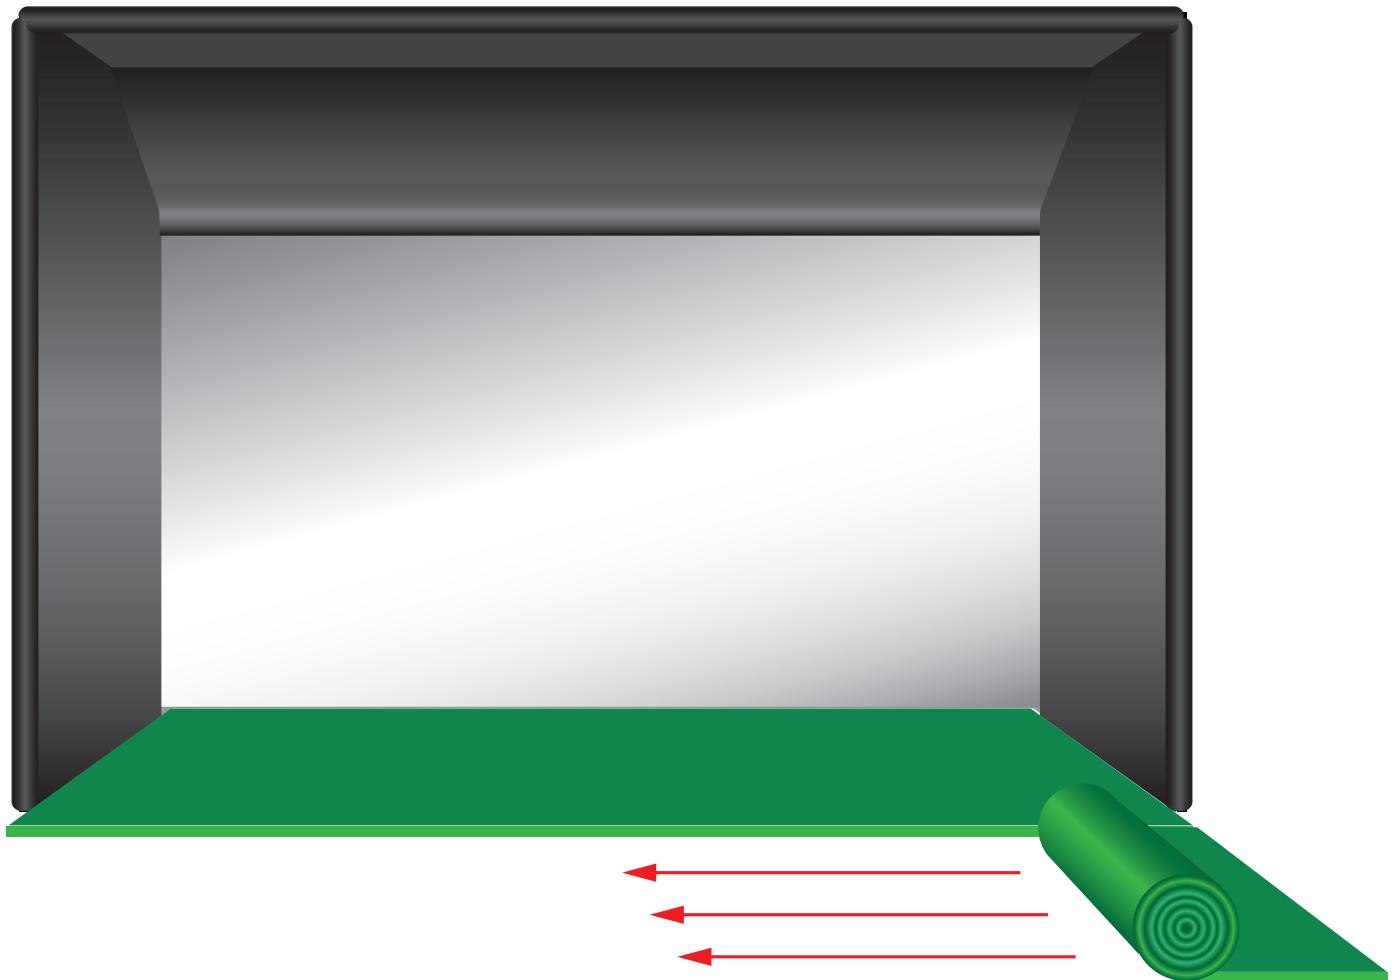

STEP 4: COMPONENT SETUP


2

Follow the separately included instructions for the assembly of the Hitting Mat.

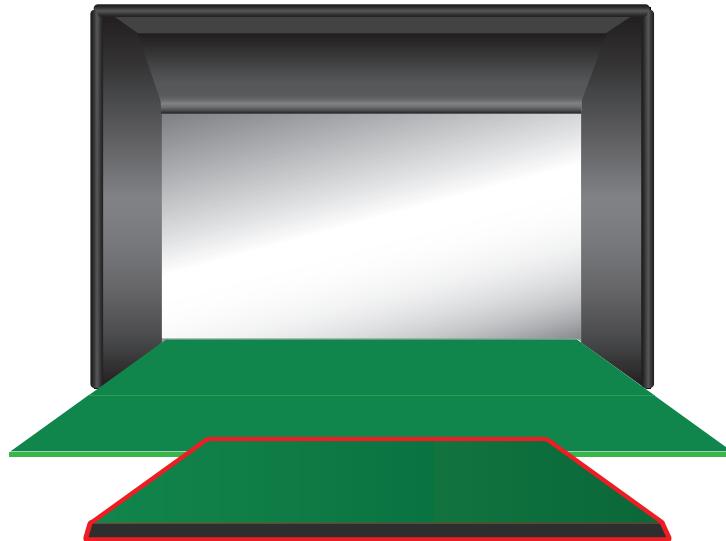

3

Follow the separately included instructions for the assembly of the Rolling Computer Cart.

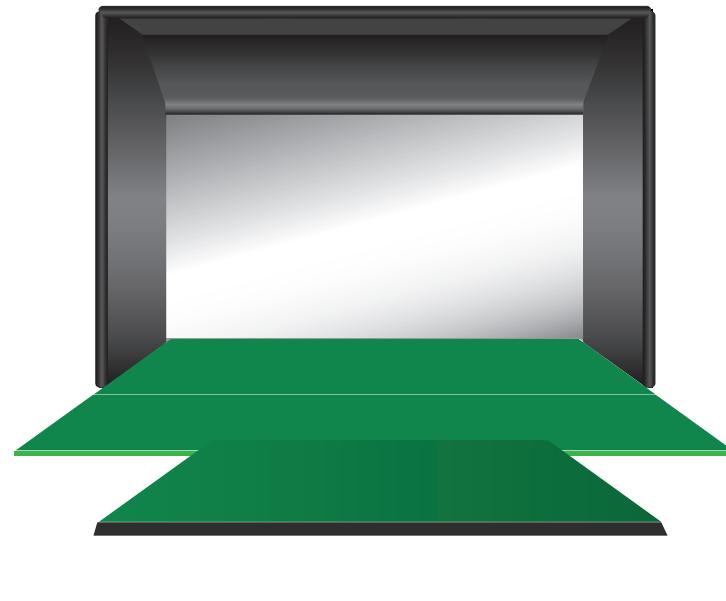

NOTE: Do NOT attach the provided back panel to the middle shelf. This will obstruct the placement of the projector.




STEP 4: COMPONENT SETUP


3B

Place the Rolling Computer Cart in the correct position based on player handedness.

RIGHT-HANDED
Player Position
(most common)

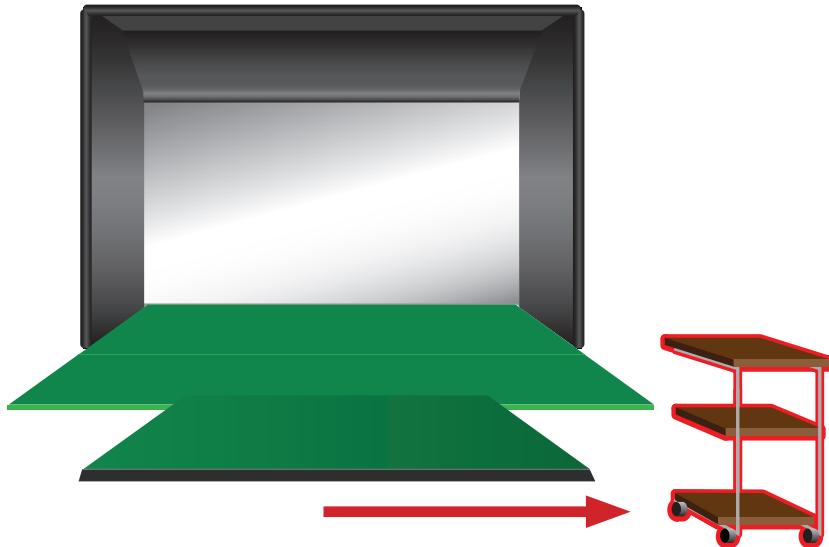

LEFT-HANDED
Player Position
(less common)

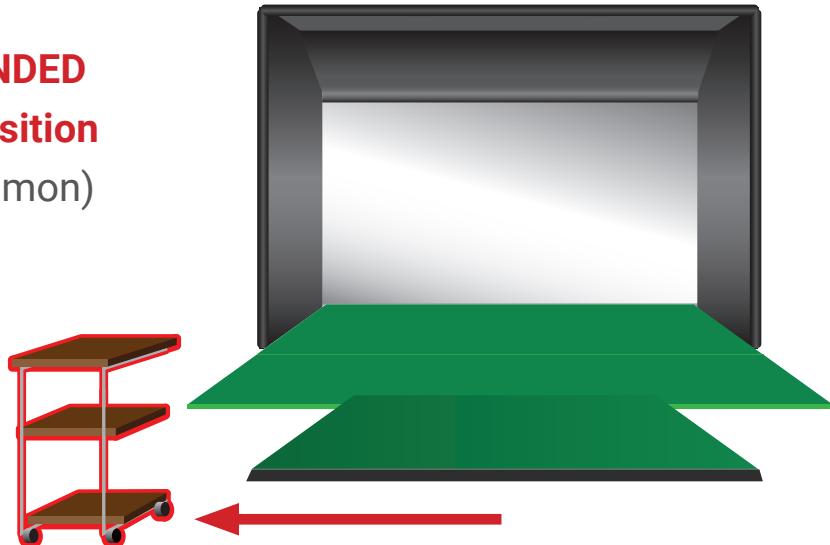


STEP 4: COMPONENT SETUP

4

Place the computer, Mouse/Keyboard, and Projector on the Rolling Computer Cart as shown.

Then connect the following:


- Connect the projector to the Computer using the provided HDMI cable.
- Connect the Wireless Mouse/Keyboard to the Computer via BlueTooth.
- Connect the Computer to the internet via Ethernet, or connect via WiFi if available.
- Connect power cords to Computer and Projector and connect to power supply.

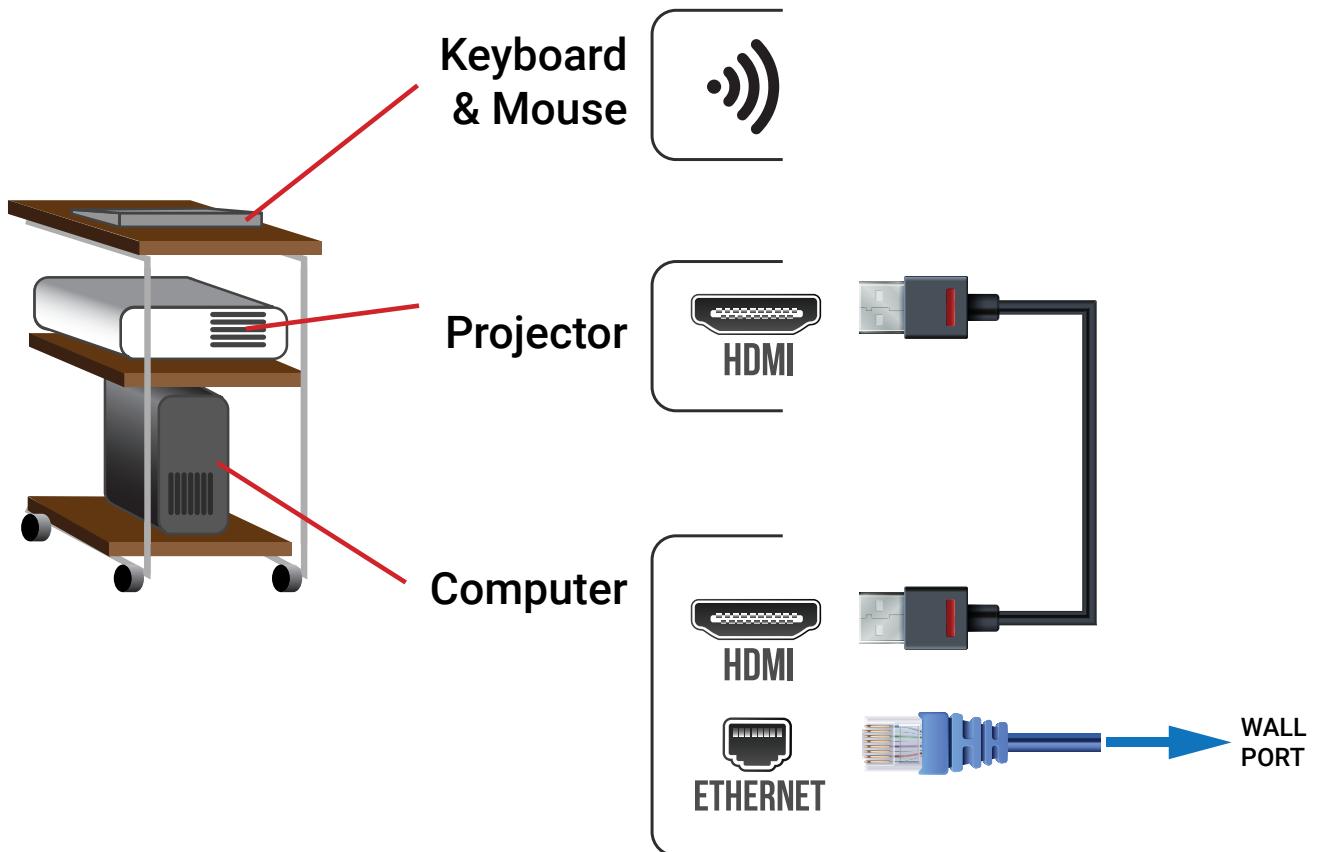

STEP 4: COMPONENT SETUP

5


Place the Launch Monitor on the Hitting Mat.

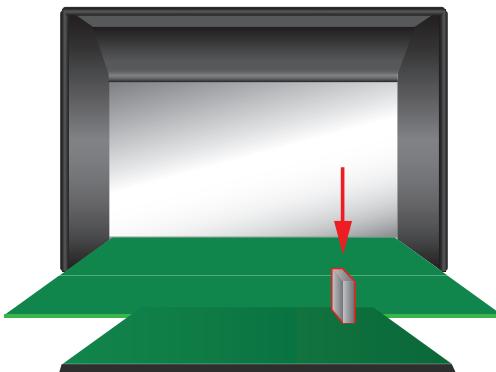

Using a measuring tape, find the center line of the Turf & Hitting Mat.

Placement of the launch monitors should be:

	from screen	from centerline
GCQuad	9'5"	1' 10"
GC2	9'5"	1' 6"

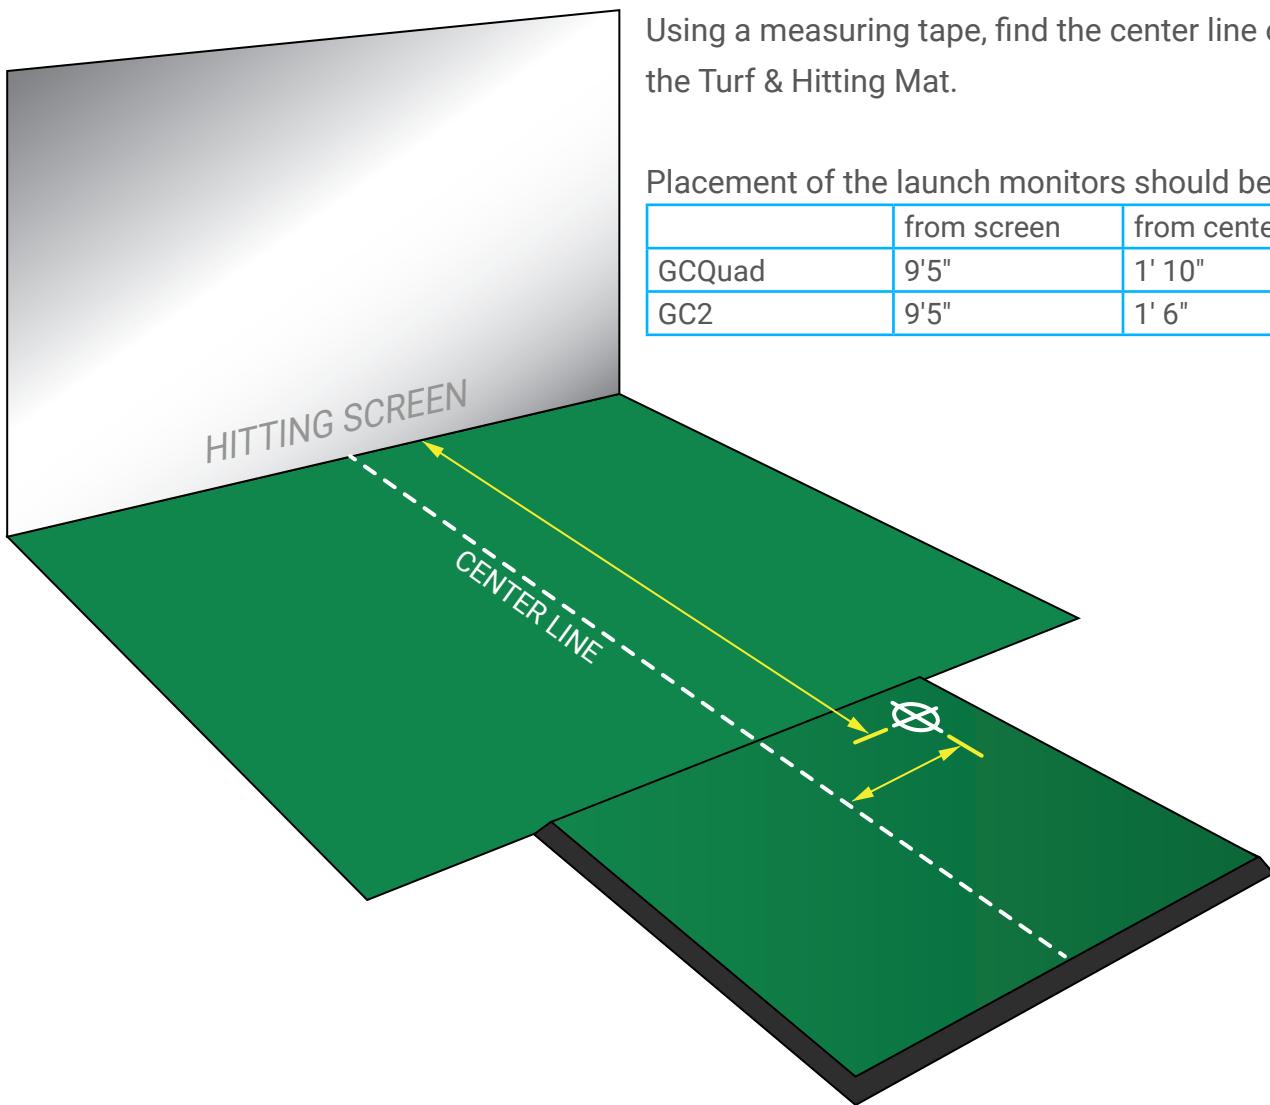


STEP 4: COMPONENT SETUP

6

Connect the Launch Monitor to the Computer using the provided USB Cord.


Connect the Launch Monitor to a power source using the provided Power Cord.

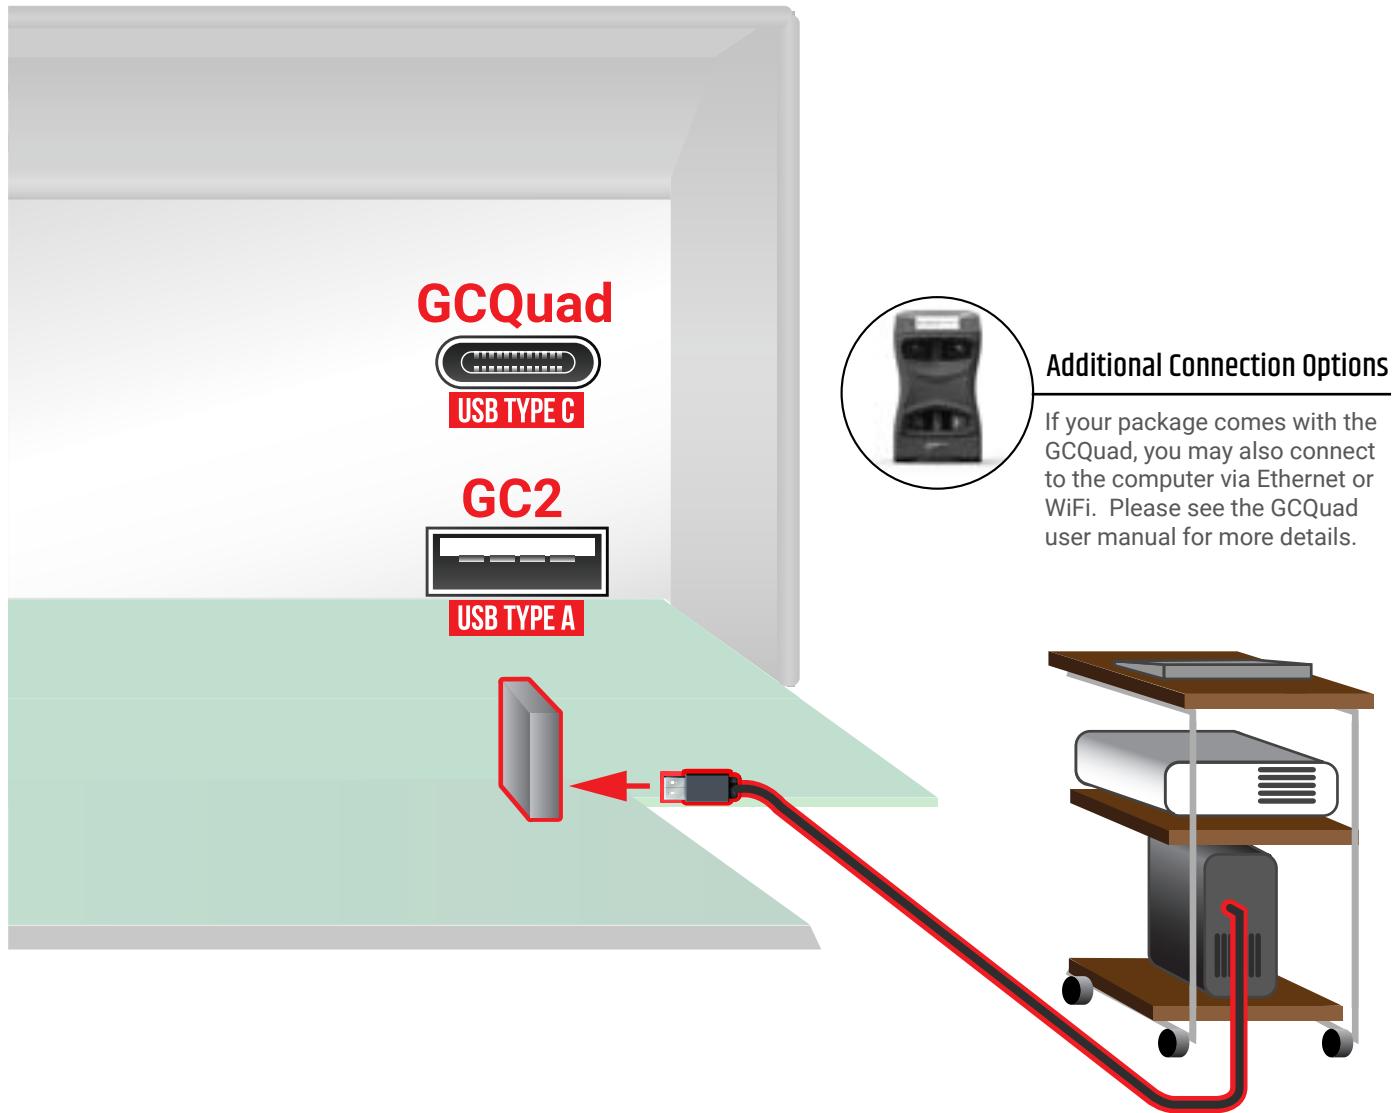

STEP 4: COMPONENT SETUP

7


Power ON the Launch Monitor, Computer, and Projector.

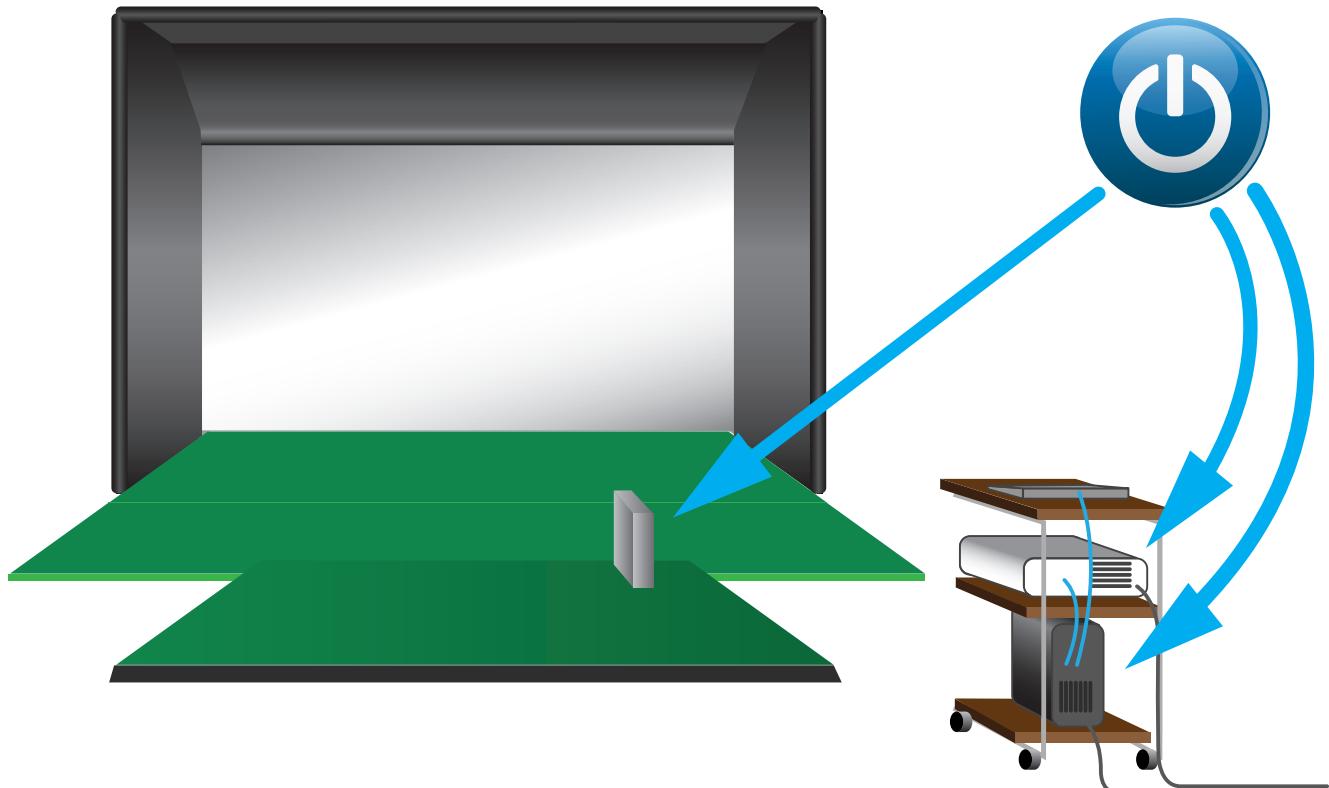

STEP 4: COMPONENT SETUP

8


With the Projector on and projecting an image, move the Rolling Computer Cart toward the Hitting Screen until the image covers ALL FOUR CORNERS of the screen.

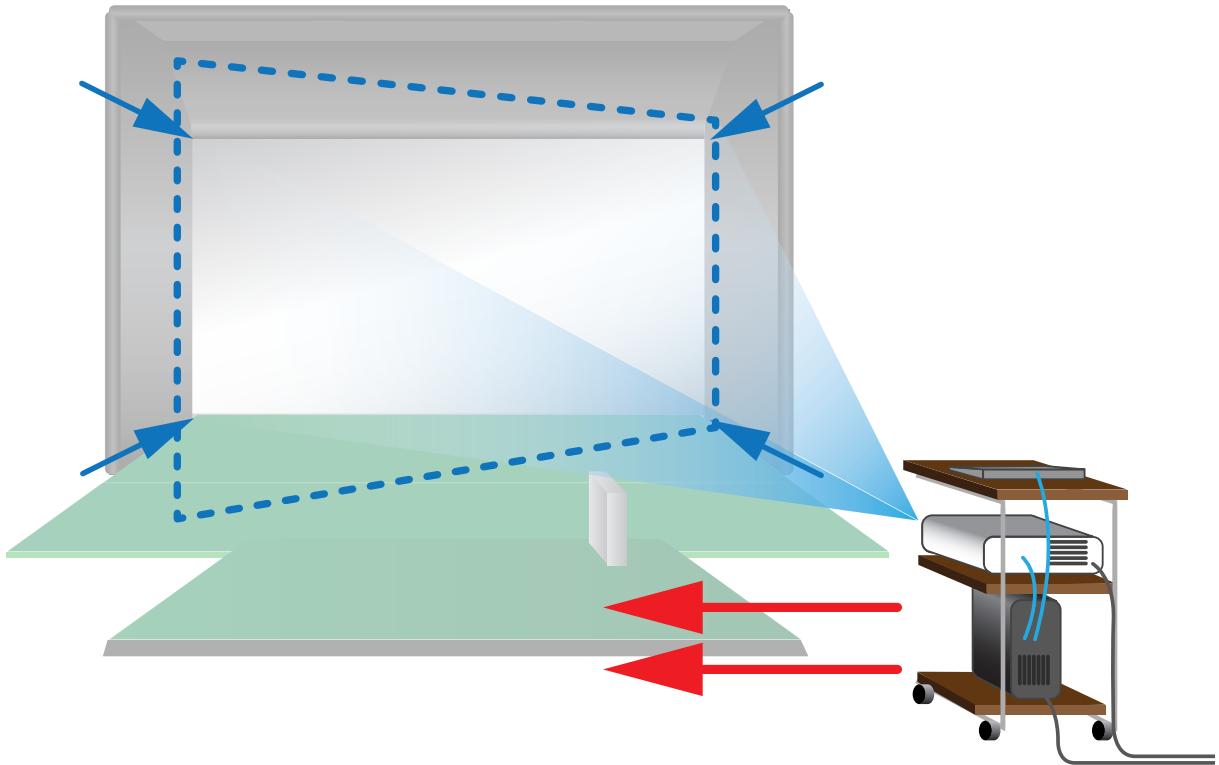

STEP 4: COMPONENT SETUP

9

Use the Projector's included remote to calibrate the projector, including aligning the corners of the projected image with the screen (using the KEYSTONE ADJUST feature)

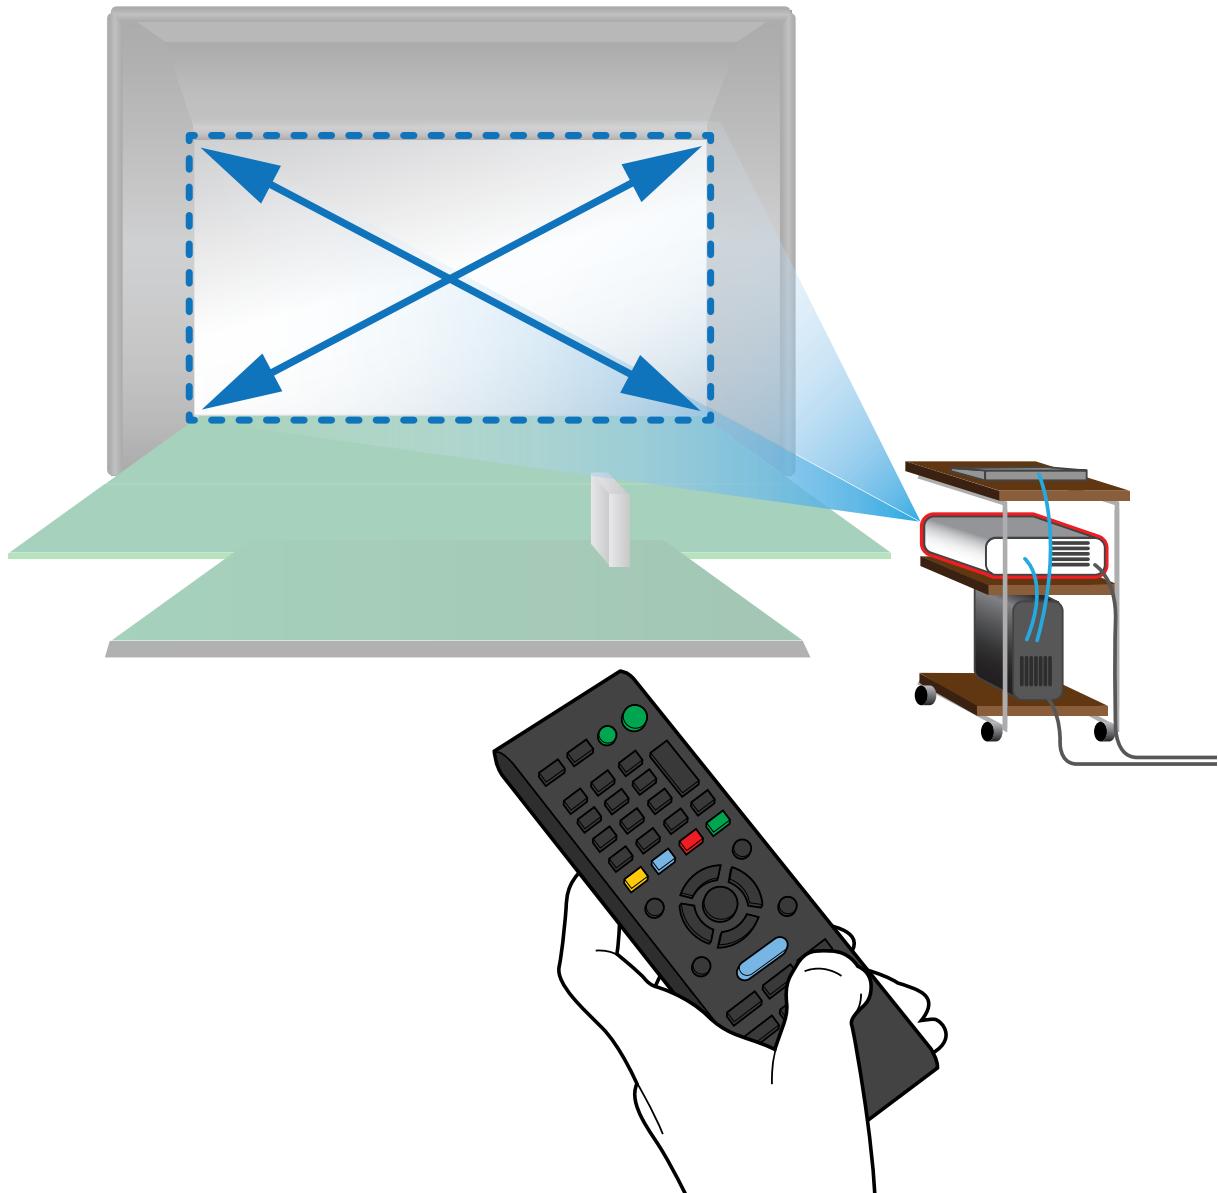

STEP 5: SOFTWARE SETUP

- 1 Power on the computer and navigate to the Windows desktop.
Locate the Foresight Sports Software icon on the desktop and double click to launch.

Important! If your FSX Live username and password had been created and provided to your Foresight Sports representative, then we have activated your software and assigned your courses to your username. If you have not done this, please follow the steps below:

Your computer is optimized for our FSX software suite. The latest FSX, golf courses, and Fairgrounds have already been installed - to get started, you must first complete your user registration by visiting FSX Live at: performance.foresightsports.com, then open your FSX 2018 software. All that's left is to activate the courses with our Order Fulfillment team!

When you're ready to activate your golf courses, please make sure you have registered for your **FREE** FSX Live account. Once you've created your FSX Live account, please email our Order Fulfillment team at orderfulfillment@foresightsports.com with the subject line **"Sim-in-a-Box Course Activation"** and the following information in the body of the email:

• FSX Live username	• Sales order number*
• Email registered with FSX Live	• FSX Activation Code*

You'll receive an email confirmation when your courses are activated.

** This information can be found on the Setup Insert inside your box.*

STEP 5: SOFTWARE SETUP

2

Launch the Foresight Sports Software.

PLEASE NOTE: This software requires internet access to validate.

Internet access will also allow your software to communicate to the Foresight cloud for additional FSX LIVE features.

If you do not have regular internet access, you may setup your software to utilize offline hours using these instructions:

<https://www.foresightsports.com/fsx-2020-offline-hours-activation>

3

Connect the Launch Monitor.

Upon launching the software, you may now connect to the Launch Monitor by following these steps:

- 1) Locate the setting icon (Usually a Gear Icon).
- 2) Open the "Devices" tab (Be sure your device is powered on and connected to the computer using the USB Cable).
- 3) Select your launch monitor's Serial Number and select "CONNECT".
If your launch monitor's Serial Number does not appear, select "FILTERS" then select "USB". The launch monitor should now appear.
- 4) If you have any issues, a detailed Connection Guide can be found at:
<https://www.foresightsports.com/fsx-2020-connection-guide>

STEP 5: SOFTWARE SETUP

4

Navigating the Software.

With the Launch Monitor now connected, you may begin navigating and using the software.

For detailed information on the FSX software, please use the resources below:

FSX Live User Guide:

<https://www.foresightsports.com/fsx-2020-user-manual>

Foresight Fairgrounds:

<https://www.foresightsports.com/foresight-fairgrounds-user-manual>

