

## STEP 3: EXTERIOR PANELS

REQUIRED FOR THIS STEP




5

Locate the (1) Blackout Panel at one end, attach the Blackout Panel to the top edge of the Frame Assembly using the velcro strip. Align the panel side edge, being careful to keep it straight.

3. But Now needs to attach to the Top Back Edge of the Carpet Lid Panel

...me assembly. Starting at the top edge of the Frame Assembly using the velcro strip. Pushing the panel down each side as you move downward.

2. Still Has the Top Velcro HOOK edge

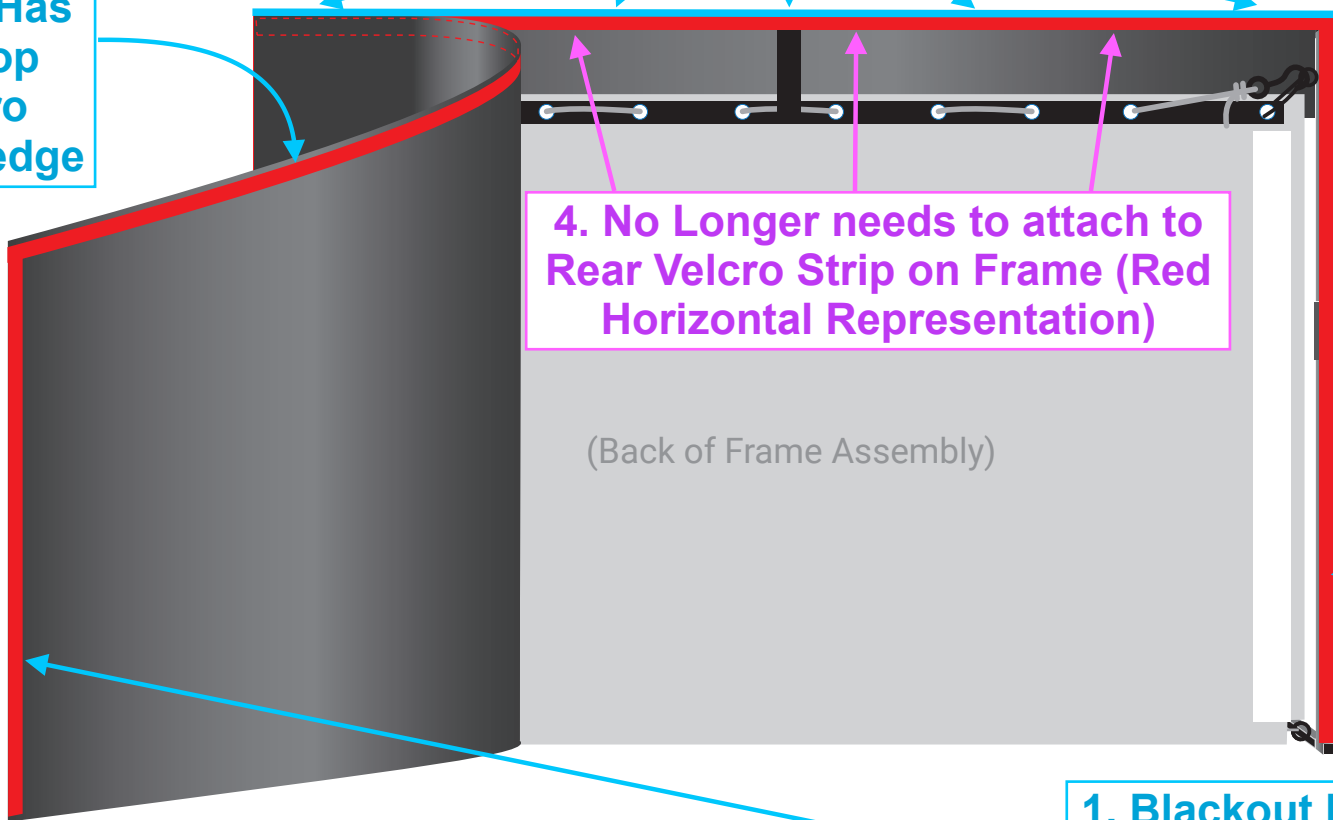

4. No Longer needs to attach to Rear Velcro Strip on Frame (Red Horizontal Representation)

1. Blackout Panel no longer has Side Velcro Edges

**Congratulations!**  
The Frame Assembly is now complete!